

Trainings ▾


Remove

⚠ WARNING ⚠

The engine lifting equipment must be designed to lift the engine and transmission as an assembly without causing personal injury.

⚠ CAUTION ⚠

Use care to support the engine and attached components properly before removing the engine mounts.

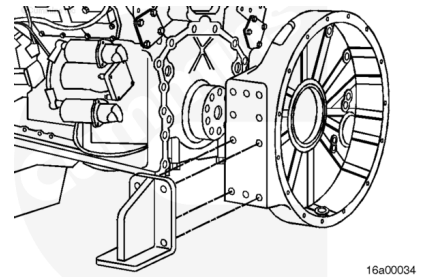


Remove the rear engine mounts from the flywheel housing.

Inspect

⚠ CAUTION ⚠

Damaged engine mounts and brackets can cause the engine to move out of alignment, can damage the driveline components in the equipment, and can result in vibration complaints.

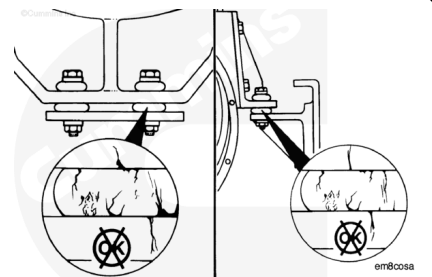

Inspect all rubber-cushioned mounts for cracks or damage.

Inspect all mounting brackets for cracks or damaged bolt holes.


Install

⚠ WARNING ⚠

The engine lifting equipment must be designed to lift the engine and transmission as an assembly without causing personal injury.

⚠ CAUTION ⚠

Use care to support the engine and attached components properly before removing the engine mounts.

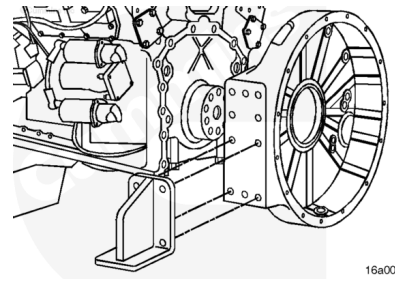

Install the rear engine mounts onto the flywheel housing.

Install the M20 capscrews and tighten.

Engine Mounts	420 n.m	[310 ft-lb]
---------------	---------	-------------