

Trainings ▾

Cylinder Head

Tool Number	
3163293	
Boot Pliers	
Used to remove the valve stem seals in the cylinder head during engine rebuild.	
©Cummins Inc	

Tool Number
3163424
Valve Guide Arbor Set
Use tapered arbors with valve seat insert tool (ST-257).


Tool Number
3163430
Crosshead Guide Installer
Used to install the crosshead guide pin in the cylinder head to the proper assembly height.



Tool Number

3163639

Valve Spring Compressor

Used to compress the valve springs to allow the valves to be removed or installed. This tool is air-operated.

©Cummins Inc

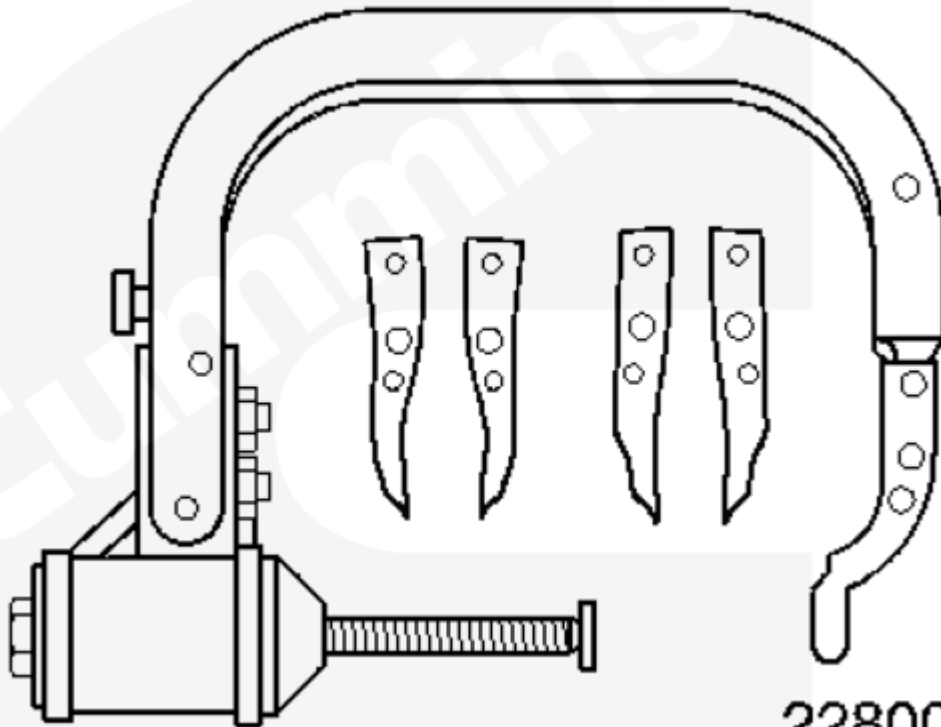

22800430

Tool Number

3163760

Cylinder Head Capscrew Length Gauge

Used to measure free-length stretch of the used cylinder head capscrews that have been used in the torque-to-yield tightening method.

©Cummins Inc

Tool Number

3375068

Cup Plug Loctite™

Used to lock bolts in place and prevent from loosening.

**Tool Number**

3375182

Valve Spring Tester

Used to compress the valve spring to measure spring force.

©Cummins Inc



kn8togs


Tool Number

3375784

Light-Duty Puller

Used to remove small seals, sleeves, bearing races, and bushings.

©Cummins Inc

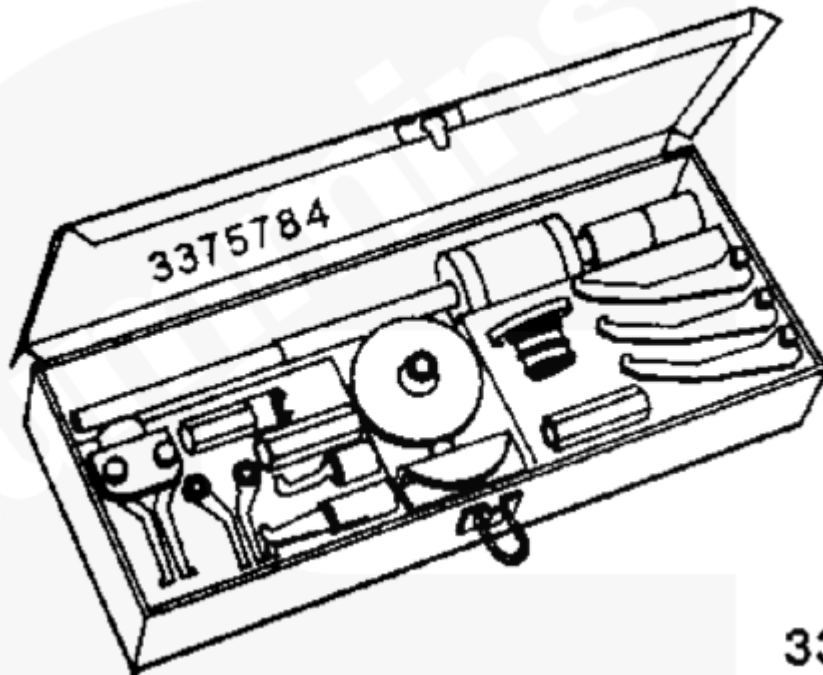**3375784**

Tool Number
3375805
Lapping Paste
Used to lap valve and seat.



Tool Number

3376405

Valve Seat Grooving Kit

Used to extend the life of the valve seat extractor.

©Cummins Inc

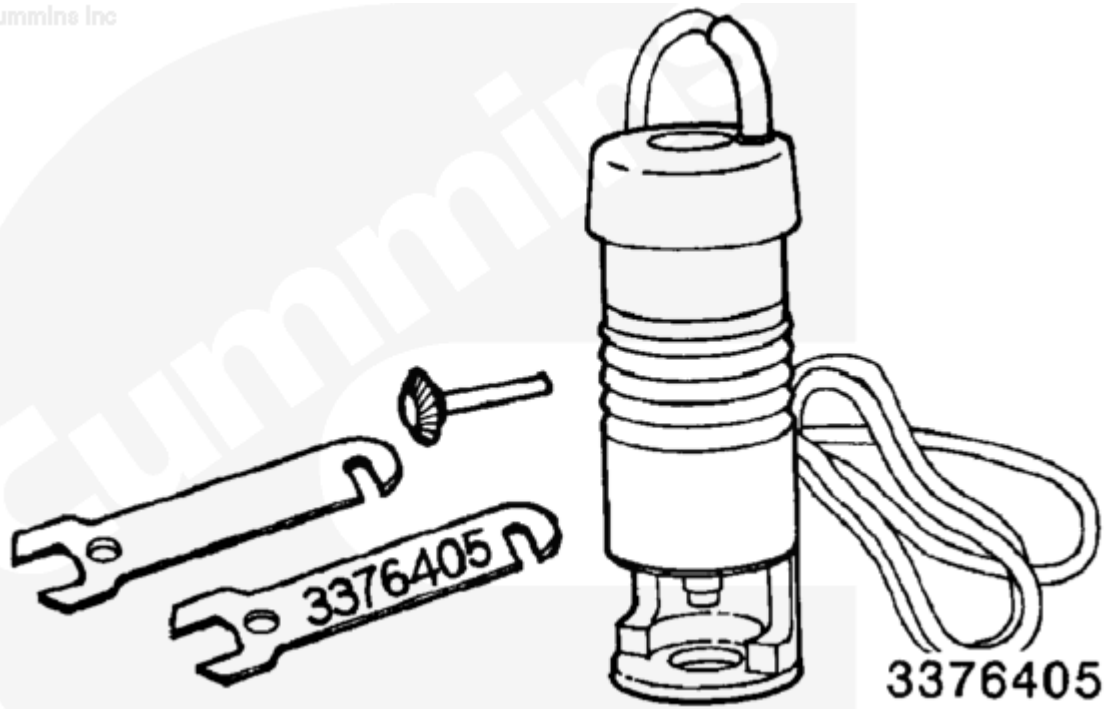


Tool Number

3376617

Valve Seat Extractor (exhaust)

Used to remove valve seats from the cylinder head without damaging the cylinder head valve seat.

©Cummins Inc

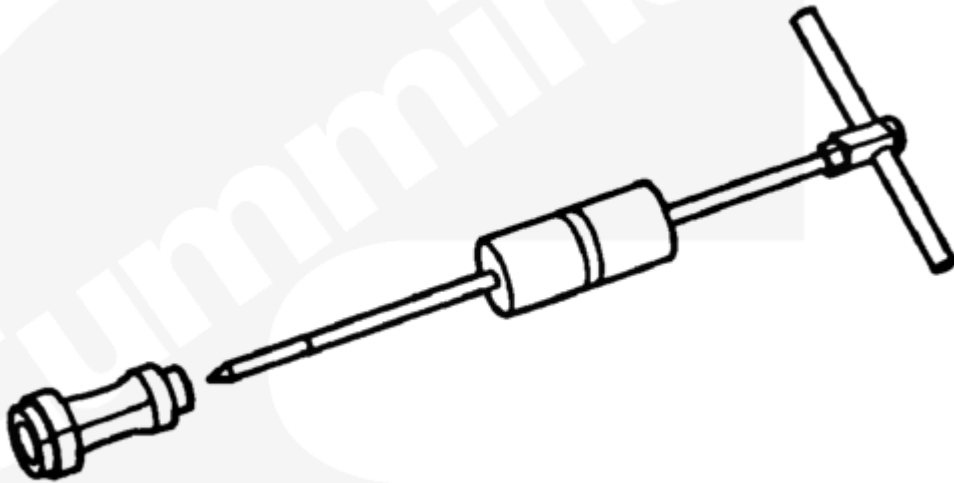

kn8togx

Tool Number	
3375043	
Valve Spring Compressor Plate	
Used with valve spring compressor stand to compress the valve springs.	
©Cummins Inc	

Tool Number	
3376793	
Cup Plug Driver	
Used to install cup plug to its proper depth.	
©Cummins Inc	


Tool Number

3376795

Cup Plug Driver Handle

Universal cup plug driver handle.

©Cummins Inc

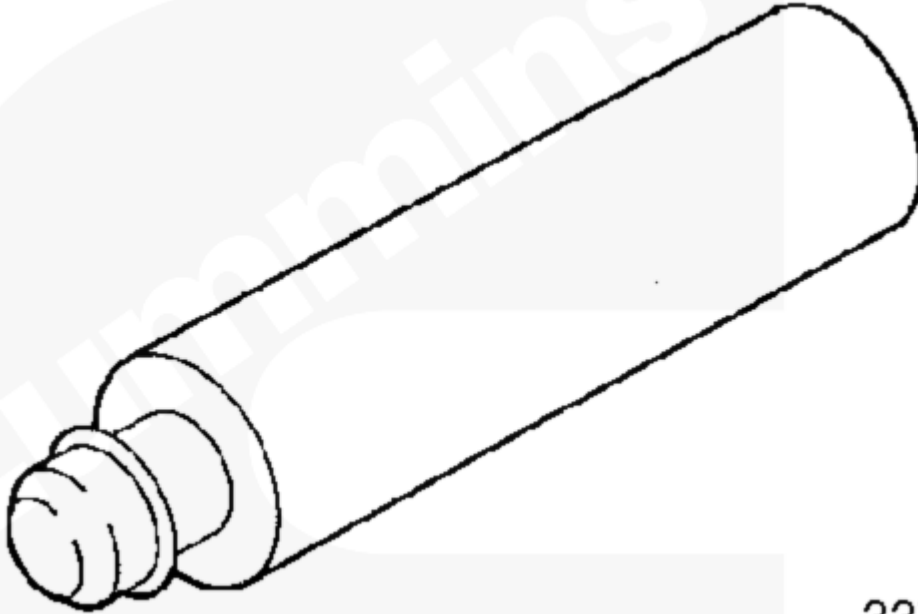

3376795


Tool Number

3377396

Valve Seat Extractor (intake)

Used to remove valve seats from the cylinder head without damaging the cylinder head valve seat.

©Cummins Inc

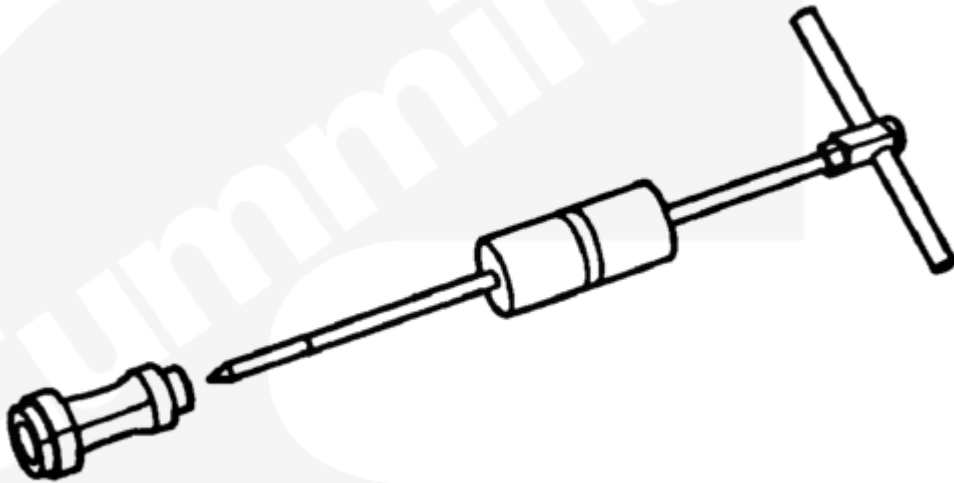

kn8togx


Tool Number

3823495

Depth Gauge Assembly

Used to measure cylinder liner counterbore ledge angle and injector protrusion.

©Cummins Inc

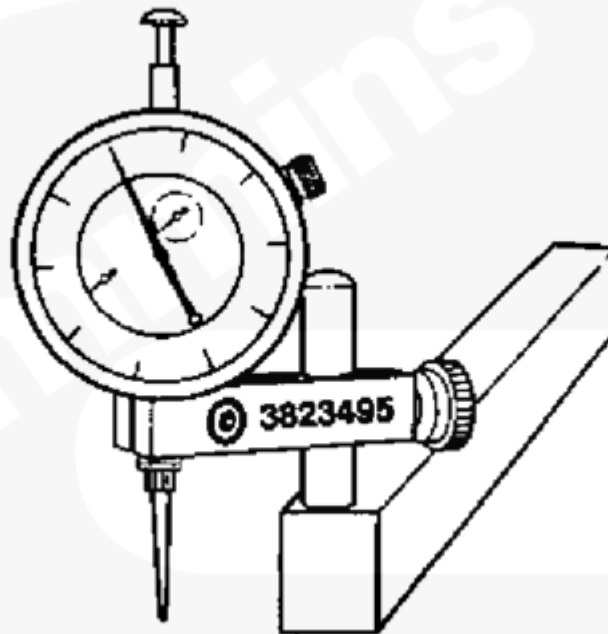**3823495**

Tool Number

3824895

Cup Plug Driver (30-mm)

Used to install expansion plugs in the cylinder block or cylinder head. Handle, Part Number 3376795, is required with this driver.

The logo for Cummins Inc, featuring a stylized 'C' inside a circle followed by the text 'Cummins Inc'.

Tool Number
3824896
Cup Plug Driver (40-mm)
Used to install expansion plugs in the cylinder block or cylinder head. Handle, Part Number 3376795, is required with this driver.

3824896

Cup Plug Driver (40-mm)

Used to install expansion plugs in the cylinder block or cylinder head. Handle, Part Number 3376795, is required with this driver.

Cummins Inc

Tool Number
3824919
Valve Guide Extractors
Used to remove the valve guides from the cylinder head during engine rebuild.
©Cummins Inc

Tool Number
4918644
Valve Stem Seal Driver
Used to install the valve stem seals in the cylinder head during engine rebuild.
©Cummins Inc

Tool Number
6304260
Valve Guide Driver
Used to press the valve guides into the cylinder head at their proper height.
©Cummins Inc


Tool Number

ST-257

Valve Seat Insert Tool

Used with appropriate cutters to counterbore cylinder heads for installation of valve seat inserts.

©Cummins Inc

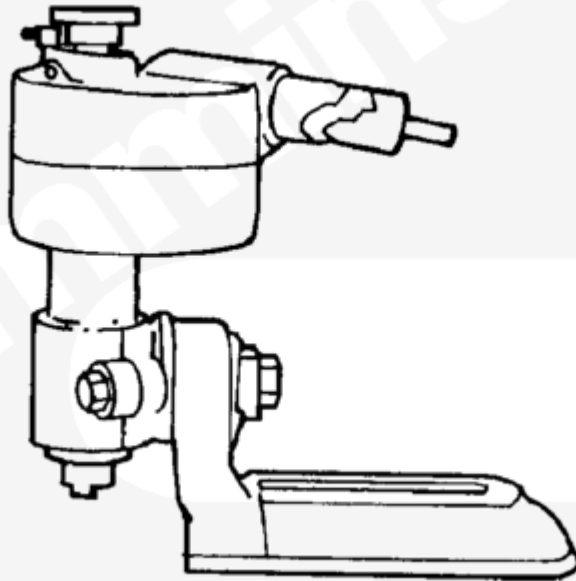


ST-257

Tool Number

ST-583

Head-Holding Fixture

Used to hold and rotate the cylinder head to various positions during the rebuild process.

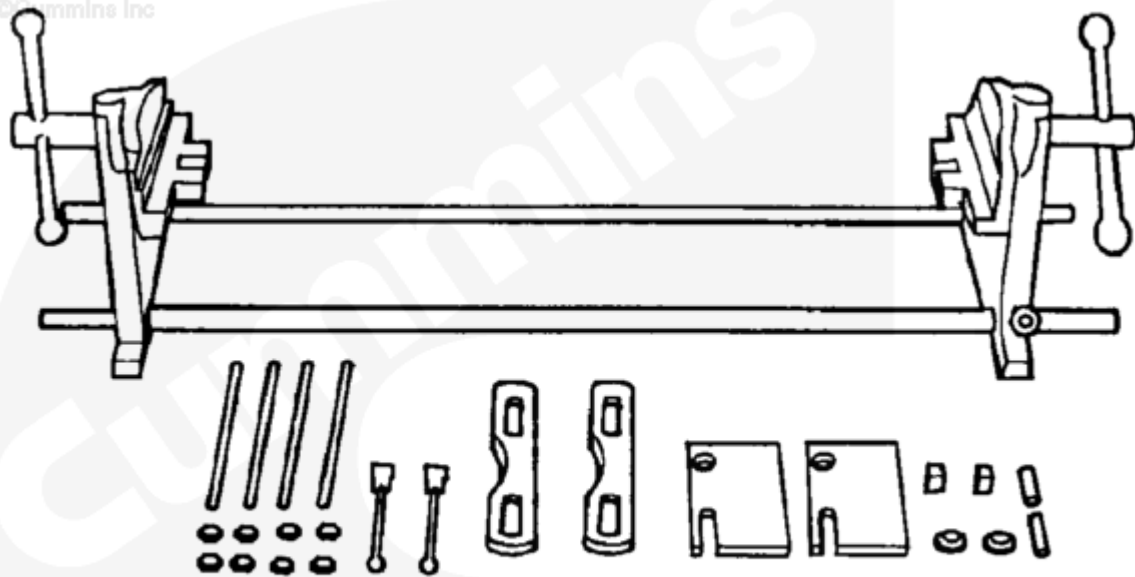

Tool Number

ST-876

Fuel Passage Cleaning Brush

Used when cleaning internal fuel passages when rebuilding cylinder heads.

©Cummins Inc



ST-876


Tool Number

ST-1012

Hydrostatic Tester

Used to check for coolant leaks in the cylinder head. Requires shop air, a lifting hoist, a water tank, and the appropriate test adapter plate and o-ring.

©Cummins Inc

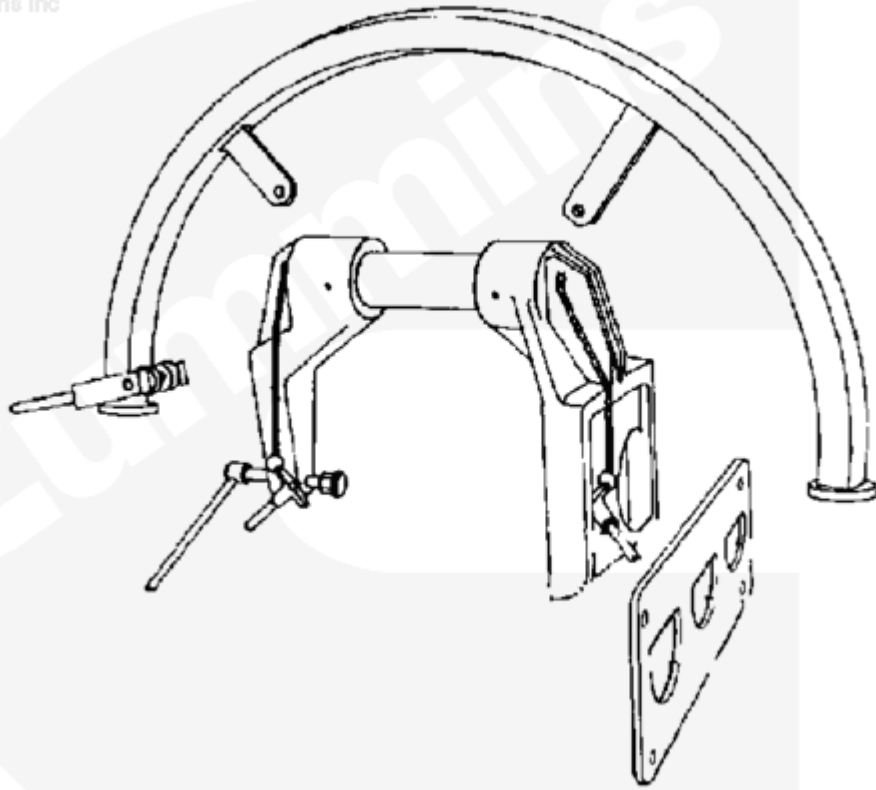

kn5tohc

Tool Number	
ST-1022	
Valve Spring Compressor Stand	
Used to compress the valve springs.	
	


Tool Number

ST-1134

Dowel Pin Puller

Used to remove crosshead guides or dowels throughout the engine.

©Cummins Inc

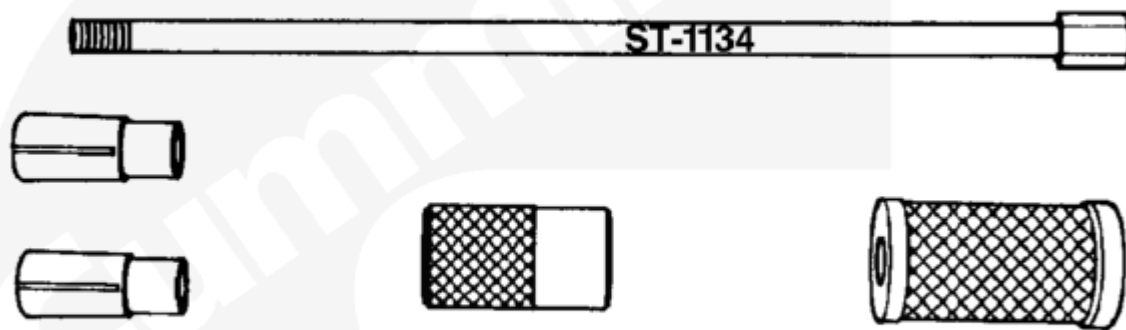

ST-1134