


Trainings ▾

Cummins® Engine Nomenclature

The model name provides identification data for the engine.
Refer to the illustration for the model name identification.

The application codes are:

- C = Construction
- D = Generator drive
- F = Fire pump
- G = Generator set
- L = Locomotive
- M = Marine
- P = Power unit
- R = Railcar.

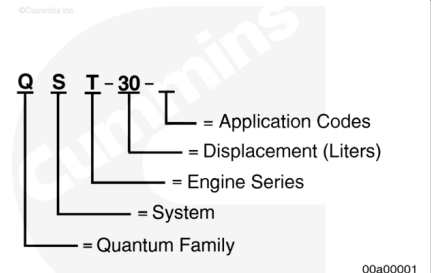

General Specifications

Cylinder Numbering Sequence


- RB = Right bank of cylinders
- LB = Left bank of cylinders.

Note : Cylinders can be numbered either by bank or sequentially.

Engine firing order: 1R-1L-5R-5L-3R-3L-6R-6L-2R-2L-4R-4L.


Cylinders are numbered from the front gear cover end of the engine.

To determine the right and left banks on the engine, stand at the rear of the engine and face the front.

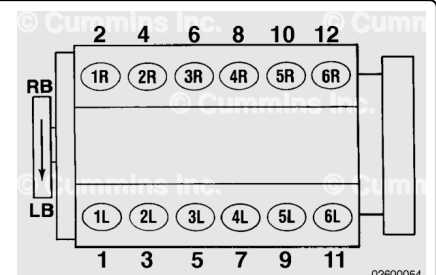

The illustration identifies the locations of the intake and exhaust valves.

Each cylinder has two rocker levers. On the left bank, the lever nearest to the rear of the engine is the intake lever. On the right bank, the exhaust valve is nearest to the rear.

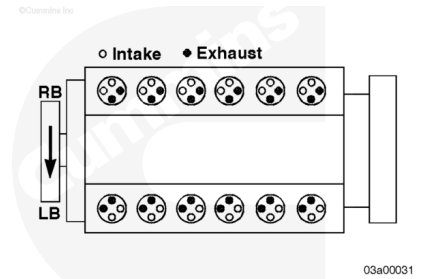


Engine Dataplate

The engine dataplate shows specific facts about your engine. The engine serial number (ESN) (1), control parts list (CPL) (2), model (3), and horsepower and rpm ratings provide information for ordering parts and performing service.

The engine dataplate **must not** be changed unless approved by Cummins Inc.

The engine dataplate on the QST30 engines are located on the left-bank side of the aftercooler.

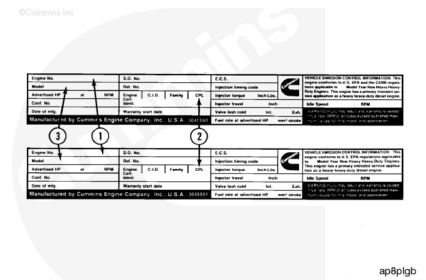

Fuel Injection Pump Dataplate

Bosch™

This is an illustration of the dataplate on the Bosch™ fuel injection pump. The dataplate is mounted on the outboard side of the injection pump housing.

1. Injection pump serial number
2. Bosch™ part number
3. Bosch™ pump identification code
4. Cummins® part number (first seven digits on this line).




Engine Control Module Dataplate

Industrial Applications


The external engine control module (ECM) dataplate contains the following data about the engine and ECM:

1. PN - ECM part number
2. SN - ECM serial number
3. DC - Date code (the date the ECM was programmed at the factory)
4. ESN - Engine serial number
5. ECM CODE - The ECM calibration identifier.

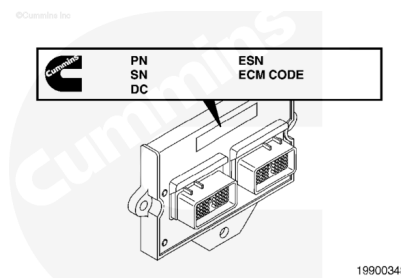


Generator-Drive

The external ECM dataplate is located at the top of the ECM.

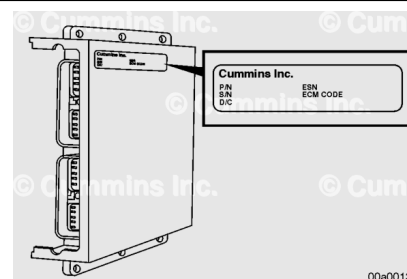


The external ECM dataplate contains the following data about the engine and ECM:

1. PN - ECM part number
2. SN - ECM serial number
3. DC - Date code (the date the ECM was programmed at the factory)
4. ESN - Engine serial number
5. ECM CODE - The ECM calibration identifier.

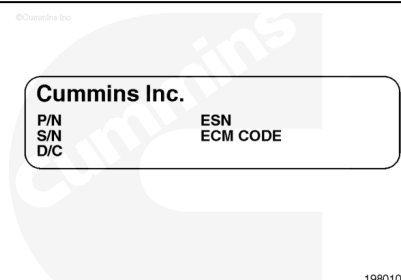


The external ECM dataplate for the generator-drive control system is located on the side of the ECM, opposite the ECM connectors.

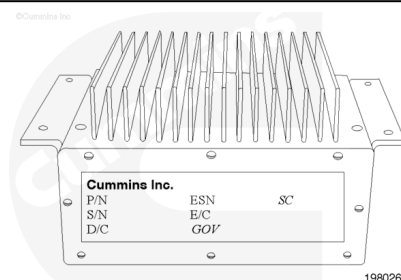

The external ECM dataplate for the generator-drive control system contains the following data about the engine and ECM:

1. P/N - ECM part number
2. S/N - ECM serial number
3. D/C - Date code (the date the ECM was programmed at the factory)

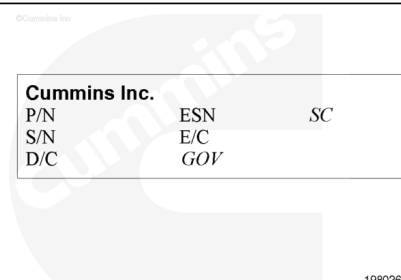

4. ESN - Engine serial number
5. E/C - Electronic configuration
6. GOV - Governor type (GOV, this entry will be blank)
7. S/C - Software calibration option.

Last Modified: 07-Feb-2013
