


Trainings ▾

Initial Check

Connect the electronic service tool to the engine harness.


Monitor the ambient air pressure. If ambient air pressure is less than or equal to 523 mm Hg [20.6 in Hg] and the present elevation is less than 3.04 km [10,000 ft], replace the ambient air pressure sensor.

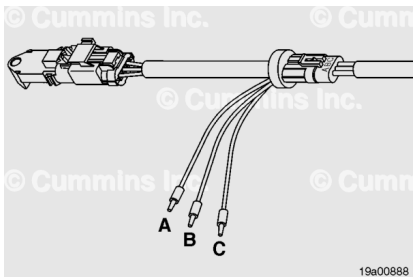

Remove

Lift up on the tab and pull the connector from the sensor.

Remove the mounting capscrew and sensor from the engine.

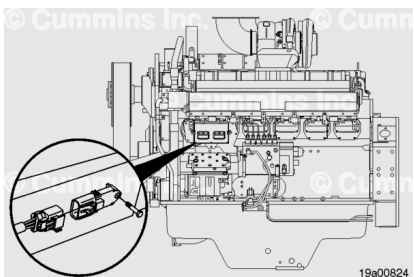

Install

Install a new sensor on the engine.

Tighten the capscrew.

QST30	23 n.m	[204 in-lb]
-------	--------	-------------

Push the connector together until locked.

