

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

©Cummins Inc.



ck800wa

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.


- Disconnect the batteries. Refer to Procedure 013-009 (Battery Cables and Connections) in Section 13 in the Service Manual, QST30, Bulletin 4021539.
(/qs3/pubsys2/xml/en/procedures/57/57-013-009.html)
- Drain the coolant from the engine. Refer to Procedure 008-018 (Cooling System) in Section 8 in the Service Manual, QST30, Bulletin 4021539.
(/qs3/pubsys2/xml/en/procedures/57/57-008-018.html)

Remove

Lift up on the locking tab and pull the connector from the sensor.

Remove the sensor.

©Cummins Inc.

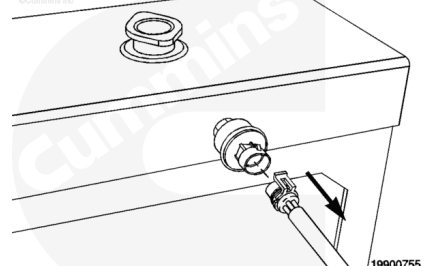


19900755

Install

Install and tighten the new sensor.

Push the connector into the sensor until the locking tab on the connector clicks.

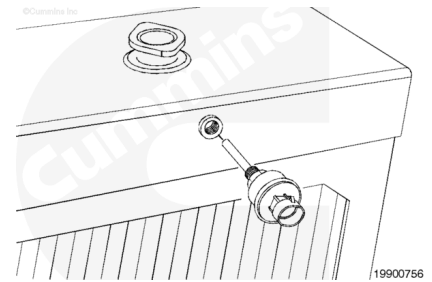

Finishing Steps

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

- Fill the engine with coolant. Refer to Procedure 008-018 (Cooling System) in Section 8 in the Service Manual, QST30, Bulletin 4021539.
(</qs3/pubsys2/xml/en/procedures/57/57-008-018.html>)
- Connect the batteries. Refer to Procedure 013-009 (Battery Cables and Connections) in Section 13 in the Service Manual, QST30, Bulletin 4021539.
(</qs3/pubsys2/xml/en/procedures/57/57-013-009.html>)
- Operate the engine and check for leaks.

