

Trainings ▾

Test

Connect an INSITE™ electronic service tool to the data link connector.

Place the RUN/STOP switch in the RUN position.

Controller **not** in the diagnostic mode.

Start the engine and let it idle.



Place a temperature probe in close proximity of the coolant temperature sensor.

Record the coolant temperature from the INSITE™ electronic service tool.


Compare the temperature of the probe and the INSITE™ electronic service tool.

If the coolant temperature on the electronic service tool is excessively higher than the water temperature, replace the coolant temperature sensor.

Refer to the Remove step in this procedure.

If the coolant temperature on the electronic service tool does **not** increase with the water temperature, replace the coolant temperature sensor.

Refer to the Remove step in this procedure.

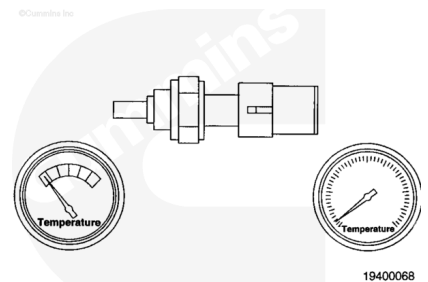

Place the RUN/STOP switch in the STOP position.

Monitor the coolant temperature with the electronic service tool.

If the coolant temperature does not decrease to the ambient air temperature, replace the coolant temperature sensor.

Refer to the Remove step in this procedure.



Preparatory Steps

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap or the coolant temperature sensor. Heated coolant spray or steam can cause personal injury.

©Cummins Inc.



ck800wa


- Drain the cooling system. Refer to Procedure 008-018 (Cooling System) in Section 8 in the QST30 Service Manual, Bulletin 4021539.
(/qs3/pubsys2/xml/en/procedures/57/57-008-018.html)

Remove

Lift up on the locking tab and pull the electrical connectors apart.

Remove the sensor.

©Cummins Inc.

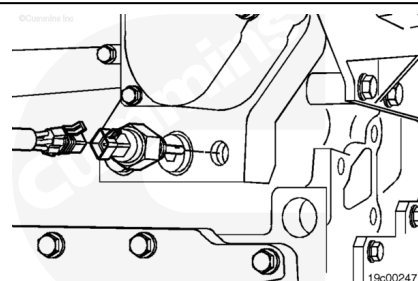

19c00247

Install


Make sure the new sensor has an o-ring installed.

Lubricate the o-ring with clean vegetable oil.

Install the new sensor into the engine. Tighten the sensor.


Torque Value: 14 n•m [124 in-lb]

©Cummins Inc.

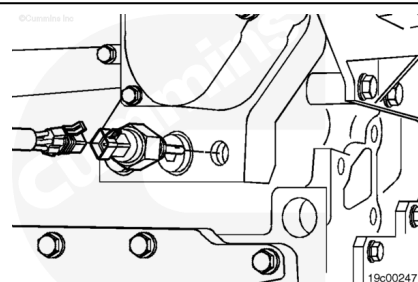

19c00247

Push the connectors together until they lock.

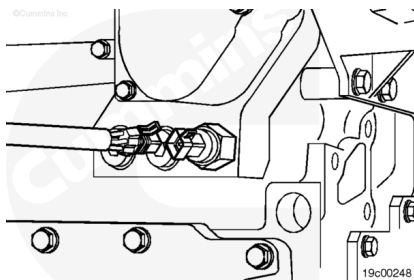

Finishing Steps

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap or the coolant temperature sensor. Heated coolant spray or steam can cause personal injury.

- Fill the cooling system and check for coolant leaks. Refer to Procedure 008-018 (Cooling System) in Section 8 in the QST30 Service Manual, Bulletin 4021539.
(</qs3/pubsys2/xml/en/procedures/57/57-008-018.html>)

