

Trainings ▾


Remove

Use INSITE™ electronic service tool to read the fault codes and to determine if the sensor needs to be replaced.

Disconnect the sensor from the engine harness.

Remove the engine position sensor from the cylinder block.

Refer to Procedure 100-002 (Engine Diagrams) in Section E for sensor location. (</qs3/pubsys2/xml/en/procedures/60/60-100-002.html>)

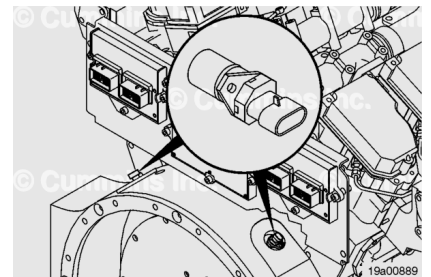


Inspect for Reuse

Inspect the engine position sensor for debris, cracked or chipped potting, extruded potting, and damage from contact with the cam gear.

If there is debris on the engine position sensor, clean the sensor.

If the sensor is chipped, cracked, extruded, or otherwise damaged, replace the sensor.

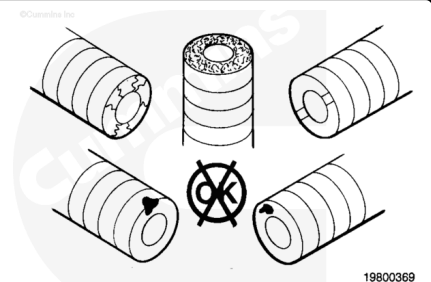


Install

Install a new o-ring onto the engine position sensor.

Install the new sensor into the mounting hole.

Connect the sensor to the engine harness. Push the connectors together until they lock.

Torque Value: 25 n•m [221 in-lb]

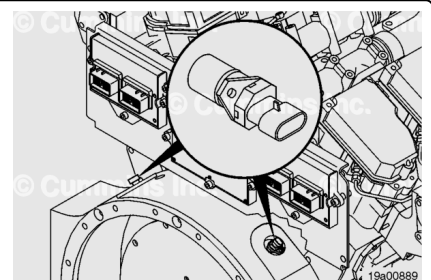

Last Modified: 14-Dec-2007
