


Trainings ▾

Remove

Remove the plastic wire tie that secures the fuse holder to the engine harness.


Cut the fuse holder off of the engine harness.

Remove 6 mm [1/4 in] of insulation from the battery 1 voltage supply and return wires.

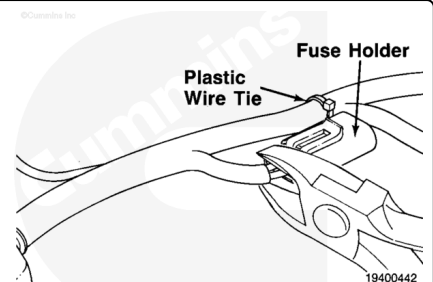

Install

Install the replacement fuse holder, Part Number 3823758, onto the bare wires.

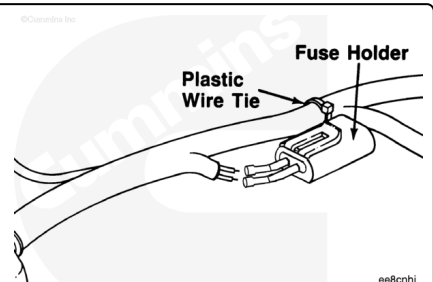

⚠ CAUTION ⚠

Use wire crimping pliers, Part Number 3822930 or equivalent. If incorrect crimping pliers are used, the fuse holder wires or splice can come loose.

Crimp the repair wire onto the bare wire.

Use a heat gun, Part Number 3823860, to heat the shrink tubing. The tube will shrink and make the connections waterproof.

