


Trainings ▾

Remove

Disconnect the engine harness connector from the intake manifold air temperature sensor.

Remove the intake manifold air temperature sensor from the engine.

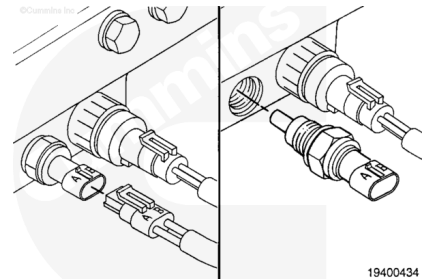


Install

Install a new o-ring on the intake manifold temperature sensor.


Install the sensor in the intake manifold.

Tighten the sensor.

Torque Value: 14 n•m [124 in-lb]

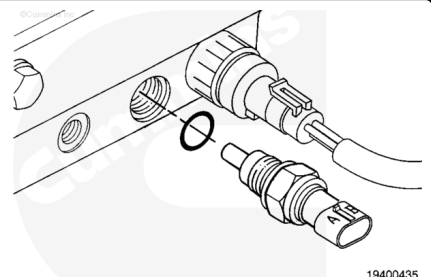


Push the connectors together until they lock.

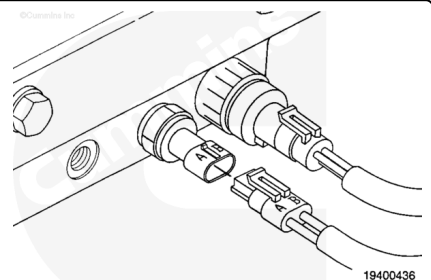


Resistance Check

Disconnect the engine harness connector from the intake manifold air temperature sensor.

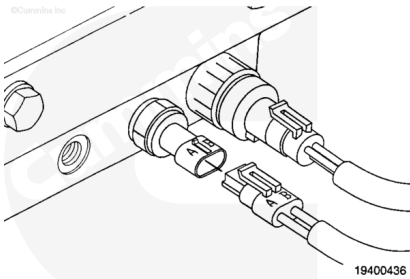


Measure the resistance between the intake manifold 1 temperature signal and intake manifold 1 temperature RETURN pin in the sensor.

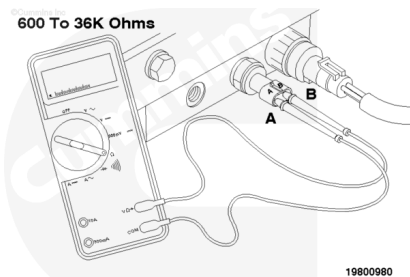

Temperature		Acceptable Resistance Range
°C	°F	(ohms)
0	32	30k to 36k
25	77	9k to 11k
50	122	3k to 4k
75	167	1350 to 1500
100	212	600 to 675

If the intake manifold air temperature sensor resistance is **not** within the range, it **must** be replaced.

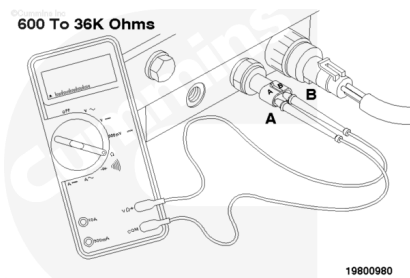

Check for Short Circuit to Ground

Measure the resistance between the intake manifold 1 temperature SIGNAL pin and engine ground.

Replace the sensor if the resistance is **not** greater than 100k ohms.

