

## Trainings ▾


### Preparatory Steps

- Disconnect the batteries. Refer to Procedure 013-009 (Battery and Cable Connections) in Section 13 of the QST30 Service Manual, Bulletin 4021539. (</qs3/pubsys2/xml/en/procedures/57/57-013-009.html>)




### Remove

Disconnect the burn solenoid connector from the Centinel™ wiring harness.

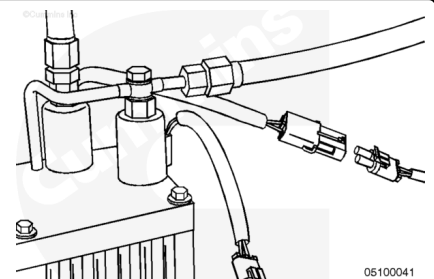

Remove the hose (1) from the top of the solenoid.


While holding the solenoid nut (3) loosen and remove the 3/8-24 SAE o-ring adapter (2).

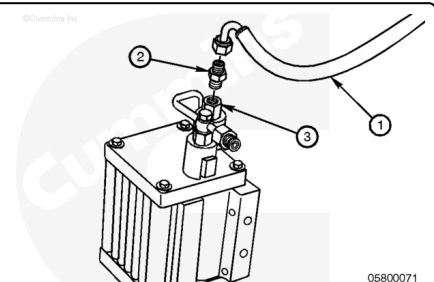

Loosen and remove the solenoid retaining nut (1).

Lift and remove the solenoid cover and solenoid (2) from the valve.

Remove the spring washer (3) and two washer/spacers (4) that were under the solenoid valve.

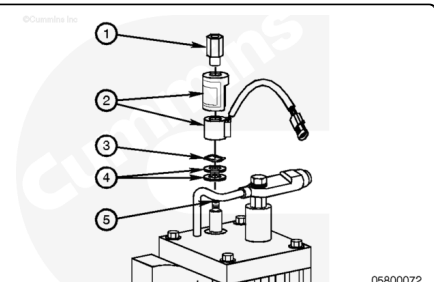

Remove the o-ring (5) from the solenoid mounting.

## Install


Lubricate and install a new o-ring (5) on the solenoid mounting.

Install the two washer/spacers (4) and the spring washer (3).

Place the new solenoid and cover (2) on the valve mounting.

Install the solenoid retaining nut (1) and tighten.

**Torque Value:** 5 n•m [ 44 in-lb ]

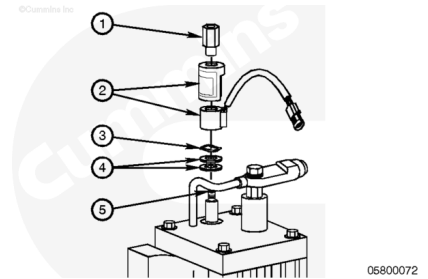


Install the 3/8-24 o-ring adapter (2).


While holding the solenoid retaining nut (3), tighten the fitting.

**Torque Value:** 13.5 n•m [ 120 in-lb ]

Install the hose (1) to the 3/8-24 o-ring adapter.

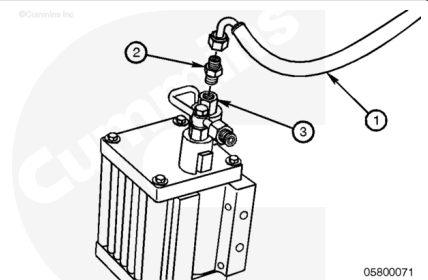

Connect the burn solenoid connector to the Centinel™ wiring harness.

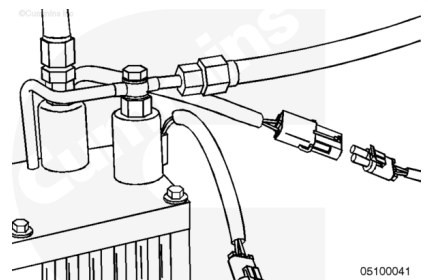

## Finishing Steps

- Connect the batteries. Refer to Procedure 013-009 (Battery and Cable Connections) in Section 13 of the QST30 Service Manual, Bulletin 4021539. ([/qs3/pubsys2/xml/en/procedures/57/57-013-009.html](http://qs3/pubsys2/xml/en/procedures/57/57-013-009.html))



---

**Last Modified: 14-Dec-2007**

---