


Trainings ▾

Remove

Disconnect the engine camshaft speed/position sensor from the engine harness. Slide the locking tab sideways. Push down on the button toward the rear of the connector and disconnect from the engine camshaft speed/position sensor.

Remove the capscrew that secures the engine camshaft speed/position sensor to the cylinder block.

Remove the engine camshaft speed/position sensor from the mounting location.

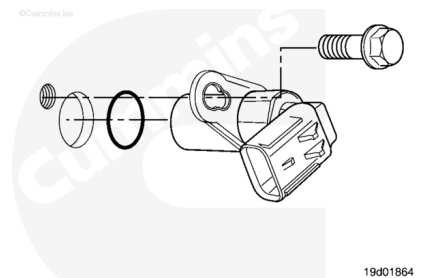

Install


Install a new o-ring onto the engine camshaft speed/position sensor.

Apply clean engine oil to the o-ring.

Install the new engine camshaft speed/position sensor into the mounting hole.

Install and tighten the capscrew.

Torque Value: 9 n•m [80 in-lb]

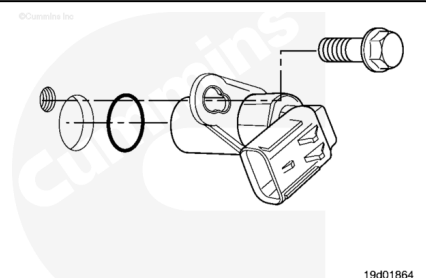

Connect the engine camshaft speed/position sensor to the engine harness.

Slide the lock tab sideways to lock the connector to the engine camshaft speed/position sensor.

