


Trainings ▾

Cummins® Engine Nomenclature

The model name provides identification data for the engine.
See the illustration for the model name identification.

The application codes are:

- A = Agricultural**
- C = Construction**
- D = Generator Drive**
- F = Fire Pump**
- G = Generator Set**
- L = Locomotive**
- M = Marine**
- P = Power Unit**
- R = Railcar**
- T = Tactical Military**

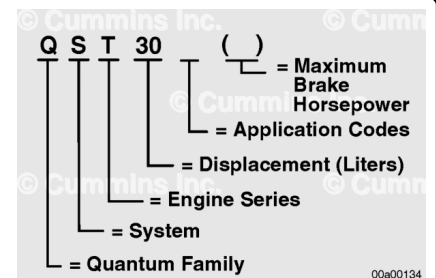


Engine Dataplate

The engine dataplate **must not** be changed unless approved by Cummins Inc.

The engine dataplate shows specific information about the engine and provides information for ordering parts and for service needs.

1. Engine serial number (ESN)
2. Control Parts List (CPL)
3. Engine model
4. Horsepower and rpm rating.

Refer to Procedure 100-002 (Engine Diagrams) in Section E for dataplate location. (</qs3/pubsys2/xml/en/procedures/60/60-100-002.html>)

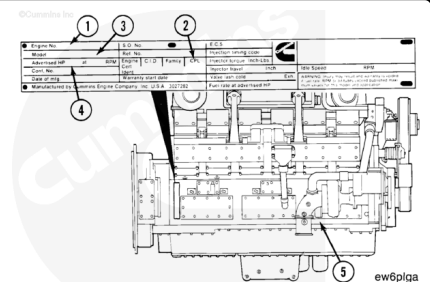

Fuel Pump Dataplate

This is an illustration of the dataplate on the Bosch® fuel injection pump. The dataplate is mounted on the outboard side of the injection pump housing.

1. Injection pump serial number
2. Bosch® part number
3. Bosch® pump identification code
4. Cummins® part number (first seven digits on this line).



ECM Dataplate

The electronic control module (ECM) dataplate shows information about the ECM and how the ECM was programmed. This dataplate is located on the front of the ECM.

The following information is available on the ECM (CM552) dataplate (1) and ECM (CM850) (2) dataplate:

- ECM part number (PN)
- ECM serial number (SN)
- ECM date code (DC)
- Engine serial number (ESN)
- ECM code (identifies the software in the ECM).

Have the ECM code from the engine available when communicating with a Cummins® Authorized Repair Location.

