


Fault Code: 1117

Power Supply Lost With Ignition On - Data Erratic, Intermittent, or Incorrect

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 1117 PID(P): S251 SPN: 3597 FMI: 2/2 Lamp: None SRT:	Supply voltage to the ECM fell below a calibrated limit momentarily, or the ECM was not allowed to power down correctly.	Possible reduced engine performance.

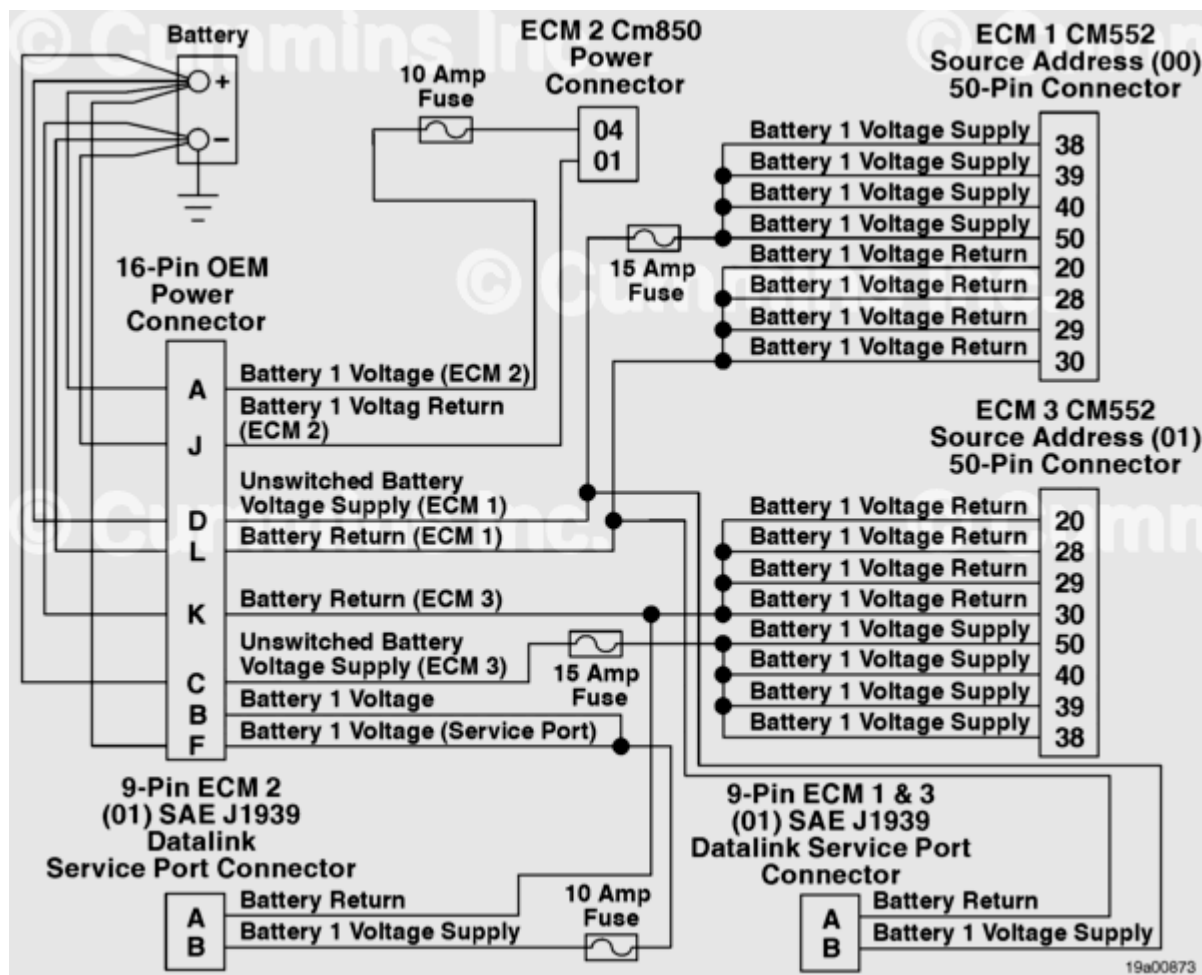

Engine Control Module (ECM)

Circuit Description

The ECM receives constant voltage from the batteries through the battery 1 voltage wires that are connected directly to the positive (+) battery post. There is a 10-ampere fuse in the battery 1 voltage wires to protect the OEM wiring harness from overheating. The ECM receives power supply through the vehicle keyswitch wire when the vehicle keyswitch is turned on. The battery 1 voltage return wires are connected directly to the negative (-) battery post.

Component Location

The ECM is connected to the battery through a 4-pin connector on the engine wiring harness inside the generator set panel. The extension harness also has a 4-pin connector that provides battery power to both ECMs and the generator set control panel. The location of the battery will vary with the original equipment manufacturer (OEM).

Conditions For Running The Diagnostics

This diagnostic runs continuously when the generator set controller is active or when the engine is running.

Conditions For Setting The Fault Codes

The Engine Control Module (ECM) detected the ECM power supply was removed before power-down parameters could be saved. The fault code will be active when the keyswitch is turned ON following the incomplete power-down event.

Action Taken When The Fault Code Is Active

- The generator set controller displays the fault immediately when the diagnostics runs and fails.

Conditions For Clearing The Fault Code

- To validate the repair, start the engine and let it run for 1 minute at no load.
- The generator set controller will turn off the indicator immediately after the user presses reset.
- The "Reset All Faults" command in the recommended Cummins® electronic service tool or equivalent can be used to clear active faults.

Shoptalk

Possible causes of this fault code include:

- Low battery voltage.

- Battery disconnect switch turned off before ECM is powered down.

Refer to Troubleshooting Fault Code 1117 . (</qs3/pubsys2/xml/en/procedures/60/60-t05-1117.html>)

Last Modified: 28-Sep-2020
