


Fault Code: 1847

Engine Coolant Temperature - Special Instructions

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 1847 PID(P): P110 SPN: 110 FMI: 14/14 Lamp: Red SRT:	Engine coolant temperature is above the engine protection warning limit.	Engine will shut down. Generator set will disconnect from the grid.

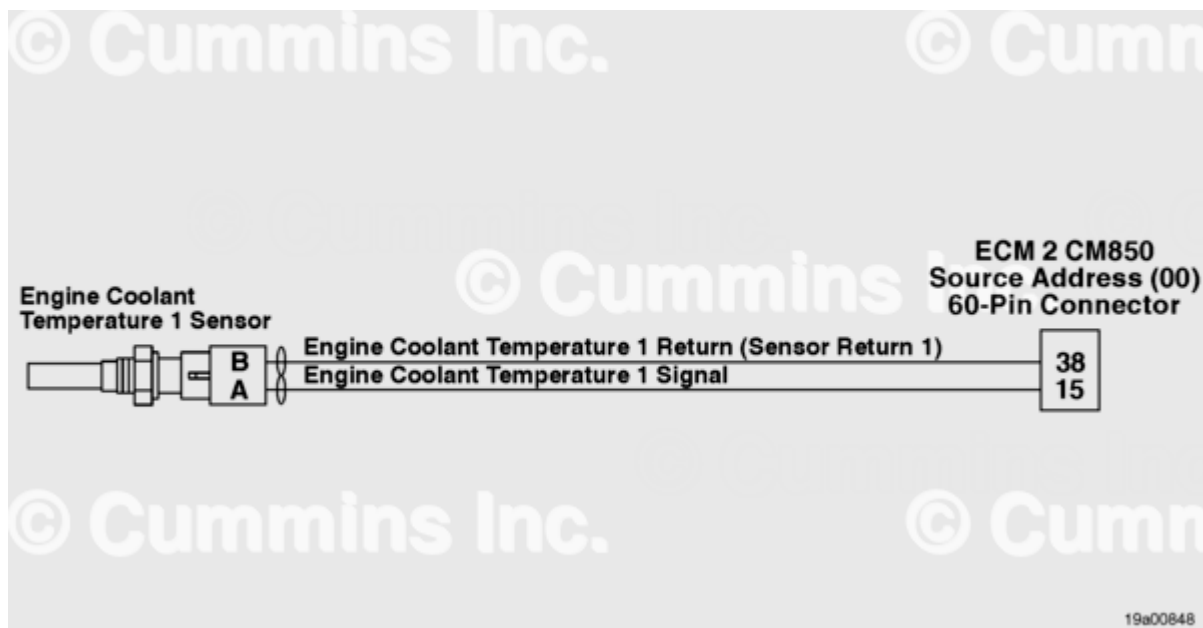

Engine Coolant Temperature Sensor Circuit

Circuit Description

The engine coolant temperature sensor is a variable resistor sensor used by the ECM to monitor the engine coolant temperature. The engine coolant temperature sensor has two circuits: signal, and return circuits. The signal voltage indicates the coolant temperature.

Component Location

The engine coolant temperature sensor is located on the thermostat housing.

Conditions For Running The Diagnostics

This diagnostic runs continuously when the engine is running.

Conditions For Setting The Fault Codes

The Engine Control Module (ECM) detected the engine coolant temperature was greater than the engine protection limit.

Action Taken When The Fault Code Is Active

- The generator set controller displays a shutdown fault immediately when the diagnostics runs and fails.
- The engine will be shut down.

Conditions For Clearing The Fault Code

- To validate the repair, bring the engine up to operating temperature and run it in normal loaded conditions for 15 minutes.
- The generator set controller will turn off the shutdown indicator immediately after the user presses the reset.
- The "Reset All Faults" command in the recommended Cummins® electronic service tool or equivalent can be used to clear active faults.

Shoptalk

Possible causes of this fault code include:

- Obstructed airflow through the radiator.
- Engine coolant level low
- Collapsed or restricted cooling system hoses.
- Malfunctioning engine coolant thermostat.
- A malfunctioning water pump.
- Malfunctioning engine coolant temperature sensor

Refer to Troubleshooting Fault Code 1847 . (</qs3/pubsys2/xml/en/procedures/60/60-t05-1847.html>)

