


Fault Code: 196

Coolant Level Sensor 1 Circuit - Voltage Below Normal or Shorted to Low Source

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 196 PID(P): P111 SPN: 111 FMI: 4/4 Lamp: Amber SRT:	Low signal voltage detected at the engine coolant level sensor circuit.	None on performance.

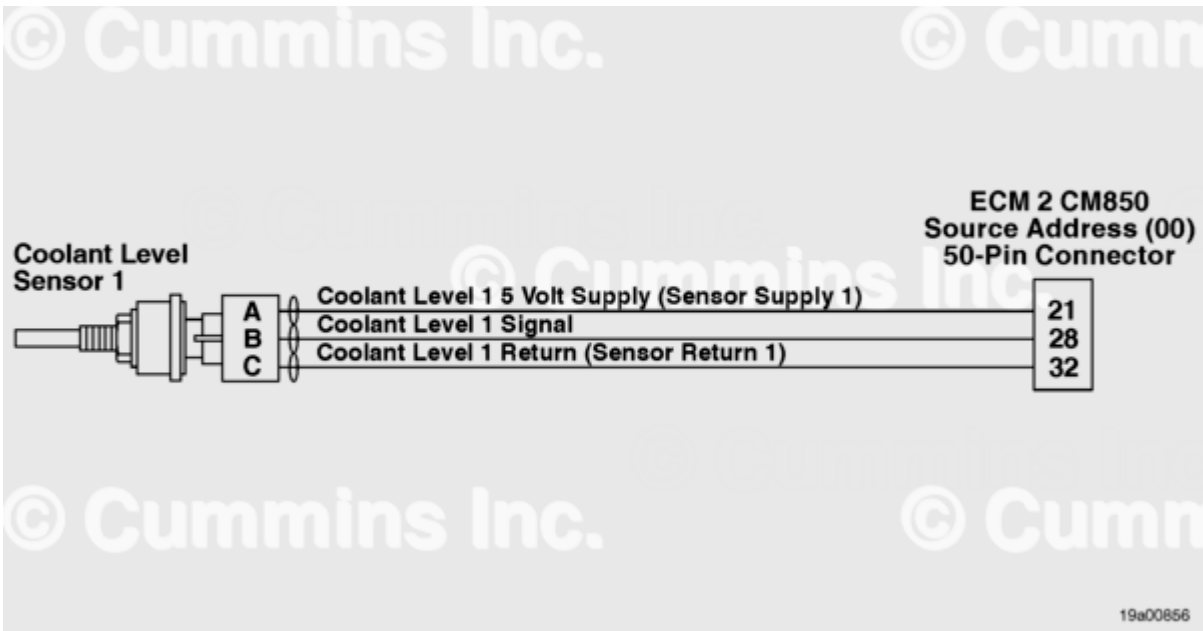

Coolant Level Sensor Circuit

Circuit Description

The coolant level sensor is a variable resistance sensor used by the ECM to monitor the coolant level. The coolant level sensor has three circuits: 5 volt supply, return and signal circuits. The signal circuit voltage indicates the level of the coolant in the radiator top tank or surge tank.

Component Location

The engine coolant level sensor is typically located in the radiator top tank or surge tank.

Conditions For Running The Diagnostics

This diagnostic runs continuously when the generator set controller is active or when the engine is running.

Conditions For Setting The Fault Codes

The Engine Control Module (ECM) detected the coolant level signal voltage was out of range low.

Action Taken When The Fault Code Is Active

- The generator set controller displays a warning fault immediately when the diagnostics runs and fails.
- No engine protection will be available for low coolant level.

Conditions For Clearing The Fault Code

- To validate the repair, start the engine and let it run for 1 minute at no load.
- The generator set controller will turn off the warning indicator immediately after the user presses reset.
- The "Reset All Faults" command in the recommended Cummins® electronic service tool or equivalent can be used to clear active and inactive faults.

Shoptalk

Possible causes of this fault code include:

- Malfunctioning or damaged engine wiring harness.
- Malfunctioning or damaged OEM wiring harness.
- Malfunctioning or damaged coolant level sensor.

Refer to Troubleshooting Fault Code 196 . (</qs3/pubsys2/xml/en/procedures/60/60-t05-196.html>)