


Fault Code: 222

Barometric Pressure Sensor Circuit - Voltage Below Normal or Shorted to Low Source

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 222 PID(P): P108 SPN: 108 FMI: 4/4 Lamp: Amber SRT:	Low signal voltage detected at barometric pressure circuit.	Possible reduced engine performance.

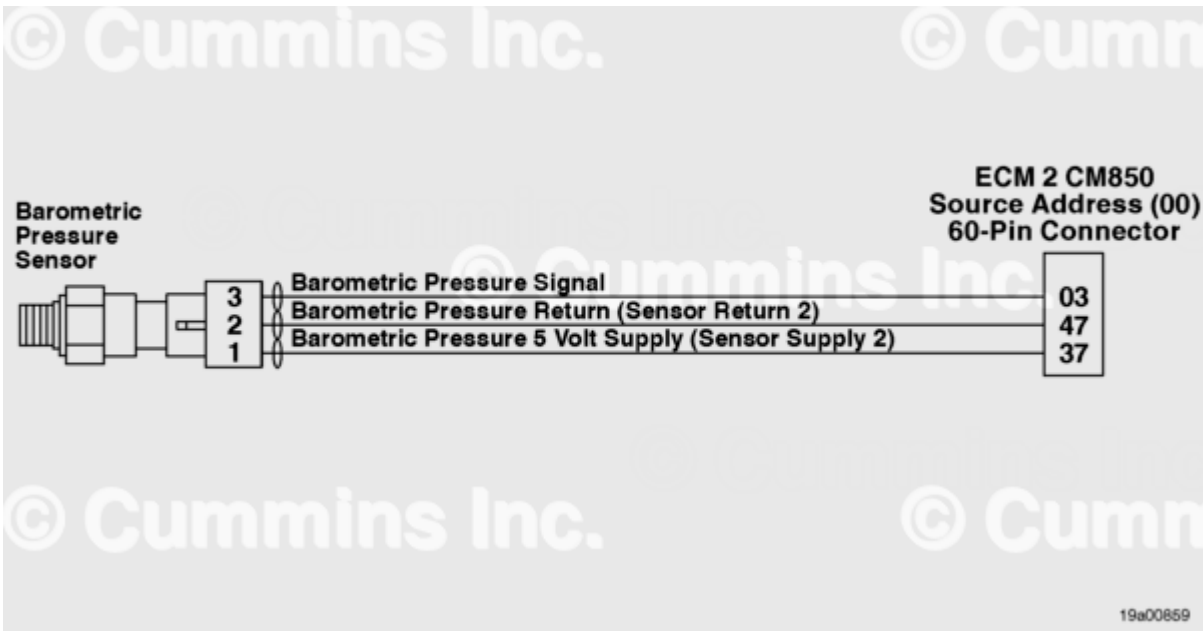

Barometric Pressure Sensor Circuit

Circuit Description

The barometric pressure sensor responds to pressure changes in the atmospheric pressure. The pressure changes occur based on the elevation where the engine is presently operating. The barometric pressure sensor has a 5 volt supply circuit, a sensor signal voltage, and a return circuit.

Component Location

The barometric pressure sensor is mounted on the main branch of the engine harness on the left side of the engine.

Conditions For Running The Diagnostics

This diagnostic runs continuously when the generator set controller is active or when the engine is running.

Conditions For Setting The Fault Codes

The Engine Control Module (ECM) detected the barometric pressure signal voltage was out of range low.

Action Taken When The Fault Code Is Active

- The generator set controller displays a warning fault immediately when the diagnostics runs and fails.
- A default value for the barometric pressure reading is used.
- Engine torque will be reduced if the engine is operated for an extended period of time with this fault active.

Conditions For Clearing The Fault Code

- To validate the repair, start the engine and let it run for 1 minute at no load.
- The generator set controller will turn off the warning indicator immediately after the user presses reset.
- The "Reset All Faults" command in the recommended Cummins® electronic service tool or equivalent can be used to clear active faults.

Shoptalk

Possible causes of this fault code include:

- Malfunctioning or damaged barometric pressure sensor.
- Malfunctioning or damaged engine wiring harness.

Refer to Troubleshooting Fault Code 222 . (</qs3/pubsys2/xml/en/procedures/60/60-t05-222.html>)

