


Fault Code: 234-ECM1

Engine Crankshaft Speed/Position - Data Valid but Above Normal Operational Range - Most Severe Level

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 234 PID(P): SPN: 190 FMI: 0 Lamp: Red SRT:	Engine Crankshaft Speed/Position - Data Valid but Above Normal Operational Range - Most Severe Level. Engine speed signal indicates engine speed above engine protection limit.	Fuel injection disabled until engine speed falls below the overspeed limit.

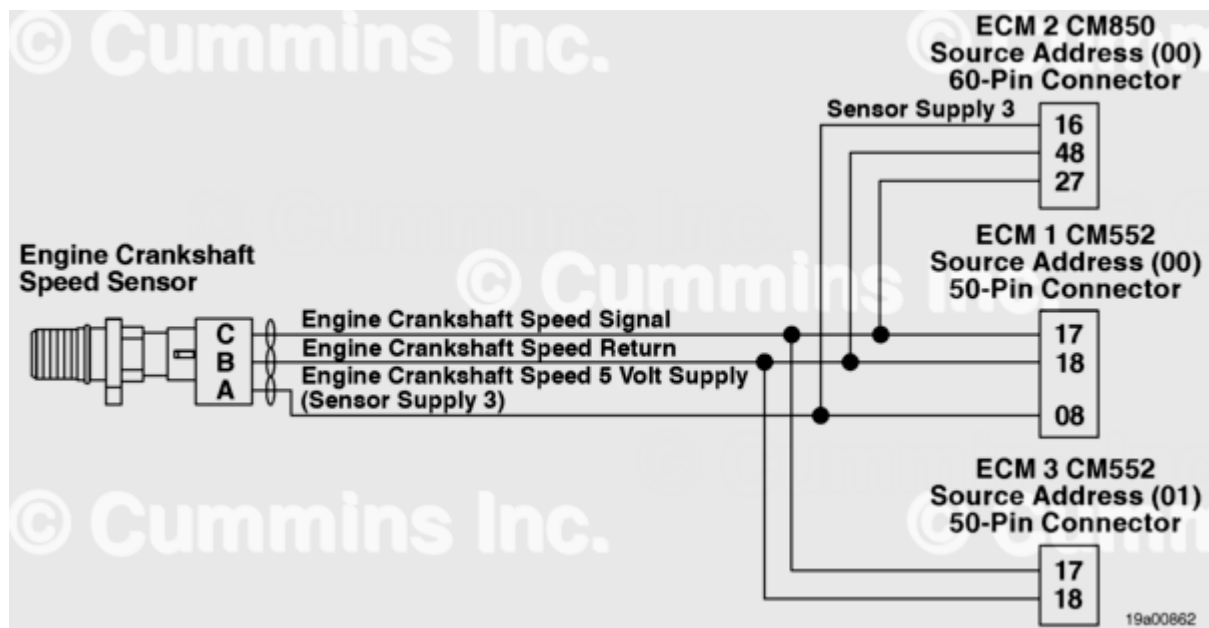

Crankshaft Speed/Position Circuit - QST30 Power Generation Interface Engine

Circuit Description

The engine crankshaft speed sensor and engine camshaft speed sensor provide engine speed and position information to the ECM through the engine harness.

Component Location

The engine crankshaft speed sensor is located in the flywheel housing. Refer to Procedure 100-002 in Section E. (</qs3/pubsys2/xml/en/procedures/60/60-100-002.html>)

Shoptalk

There are multiple ECMs. Each ECM has an individual source address that displays when INSITE™ electronic service tool is connected. When troubleshooting a fault code, use the source address displayed in INSITE™ electronic service tool to determine which ECM and circuit is affected.

Possible causes of this fault code include:

- External fuel sources drawn into the intake air passage
- Reverse powering (motoring) of the engine
- Tampering of the engine crankshaft speed sensor and the engine camshaft speed sensor.

Inspect the intake manifold for sources of flammable vapors. Check the turbocharger seals to verify that there are no oil leaks. Inspect the engine crankshaft speed sensor and the engine camshaft speed sensor for damage or tampering.

Refer to Troubleshooting Fault Code t05-234 (</qs3/pubsys2/xml/en/procedures/60/60-t05-234-ecm1.html>)