


Fault Code: 235

Coolant Level - Data Valid But Below Normal Operating Range - Most Severe Level

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 235 PID(P): P111 SPN: 111 FMI: 1/1 Lamp: Red SRT:	Low engine coolant level detected.	Engine will shut down.

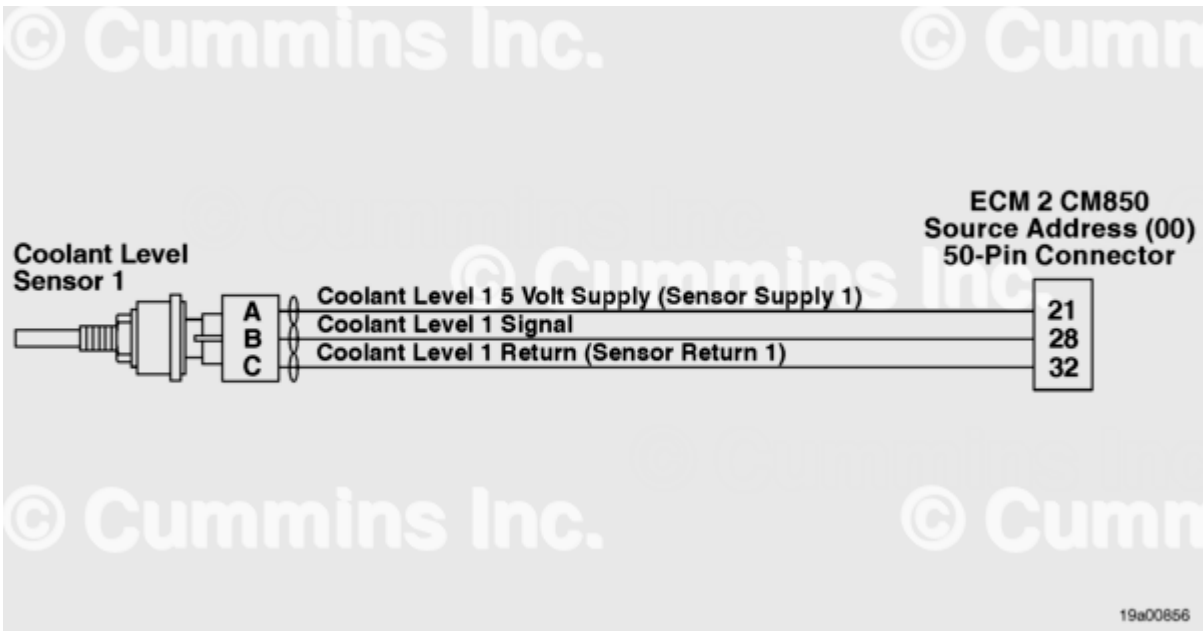

Coolant Level Sensor Circuit

Circuit Description

The coolant level sensor is a variable resistance sensor used by the ECM to monitor the coolant level. The coolant level sensor has three circuits: 5 volt supply, return and signal circuits. The signal circuit voltage indicates the level of the coolant in the radiator top tank or surge tank.

Component Location

The engine coolant level sensor is typically located in the radiator top tank or surge tank.

Conditions For Running The Diagnostics

This diagnostic runs continuously when the generator set controller is active or when the engine is running.

Conditions For Setting The Fault Codes

The Engine Control Module (ECM) detected the coolant level was below normal.

Action Taken When The Fault Code Is Active

- The generator set controller displays a shutdown fault immediately when the diagnostics runs and fails.
- The engine will be shut down.
- Engine torque will be reduced if the engine is operated for an extended period of time with this fault active.

Conditions For Clearing The Fault Code

- To validate the repair, bring the engine up to operating temperature and run it in normal loaded conditions for 5 minutes.
- The generator set controller will turn off the shutdown indicator immediately after the user presses the reset.
- The “Reset All Faults” command in the recommended Cummins® electronic service tool or equivalent can be used to clear active faults.

Shoptalk

Possible causes of this fault code include:

- Low coolant level
- Malfunctioning or damaged coolant level sensor.
- Malfunctioning or damaged engine wiring harness.
- Malfunctioning or damaged OEM wiring harness.

Refer to Troubleshooting Fault Code 235 . (</qs3/pubsys2/xml/en/procedures/60/60-t05-235.html>)

Last Modified: 28-Sep-2020