


Trainings ▾

Remove

⚠ WARNING ⚠


Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [122°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

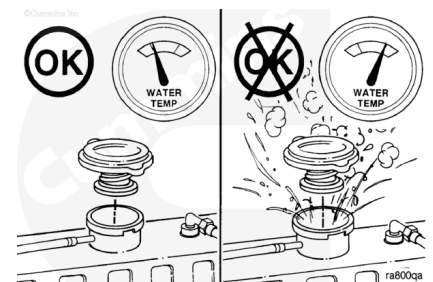

Drain the cooling system. Refer to Procedure 008-018 (</qs3/pubsys2/xml/en/procedures/35/35-008-018-tr.html>) in the ISM and QSM11 Engines Troubleshooting and Repair Manual, Bulletin 3666322.

Lift up on the locking tab and pull the electrical connectors apart.

Remove the sensor.

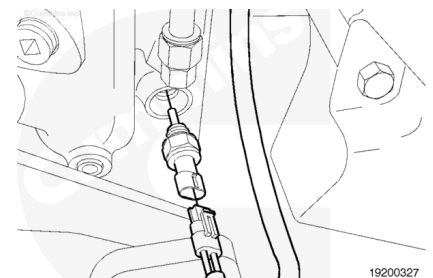


Install

Make sure the new sensor has an o-ring installed.

Lubricate the o-ring with clean engine oil.

Install the new sensor into the engine. Tighten the sensor.

Torque Value: 14 n•m [124 in-lb]

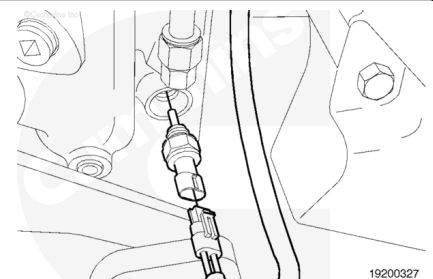

Push the connectors together until they lock.

Fill the cooling system and operate the engine to check for leaks. Refer to Procedure 008-018 (</qs3/pubsys2/xml/en/procedures/35/35-008-018-tr.html>) in the ISM and QSM11 Engines Troubleshooting and Repair Manual, Bulletin 3666322.

