


Trainings ▾

Resistance Check


Make sure the shutoff valve coil is the correct voltage (12 or 24 VDC).

The coil voltage and part number are cast into the terminal connection end of the coil.

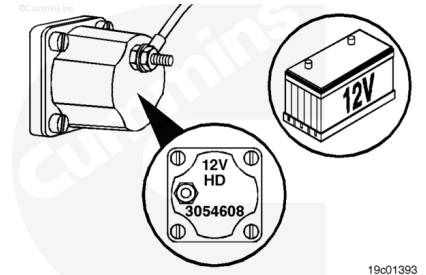

Remove the solenoid wire.

Use the multimeter meter to check the coil resistance.

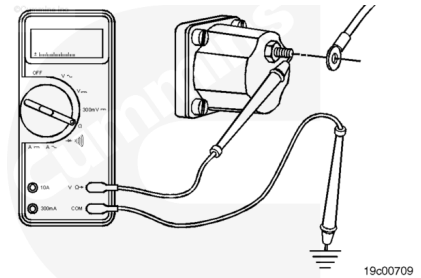

Fuel System Shutoff Valve Solenoid Specifications

Voltage	Resistance Minimum (Ohms)	Resistance Maximum (Ohms)
6 VDC	1	5
12 VDC	6	15
24 VDC	24	50
32 VDC	42	80
36 VDC	46	87
48 VDC	92	145
74 VDC	315	375
115 VAC	645	735

Note : If the solenoid shows 0 ohms, there is an electrical short in the coil.


If the coil resistance is correct, the assembly of the valve **must** be checked. If the coil resistance does **not** meet specification, the coil **must** be replaced. Refer to Procedure 005-043 (</qs3/pubsys2/xml/en/procedures/35/35-005-043.html>) in the ISM/QSM11 Troubleshooting and Repair Manual, Bulletin 3666322, for inspection of the valve.

Install the solenoid wire after completing the repair.

Voltage Check

Make sure the shutoff valve coil is the correct voltage (12 or 24 VDC).

The coil voltage and part number are cast into the terminal connection end of the coil.

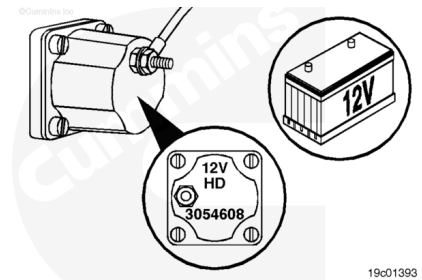


Turn the vehicle keyswitch on.

Use a multimeter to check the voltage to the coil.

The voltage **must** be the same as the battery voltage.

Turn the vehicle keyswitch off.

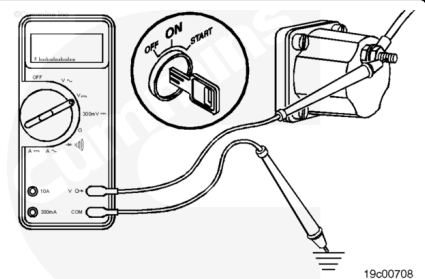


Remove

Disconnect the ring terminal from the fuel shutoff valve solenoid.

Remove the mounting capscrews securing the solenoid.

Remove the solenoid.

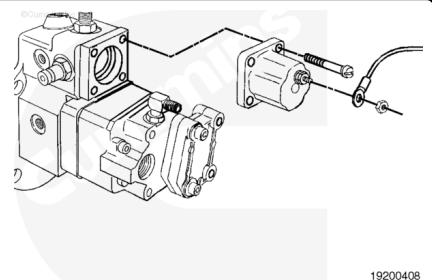


Install

Install a new o-ring on the solenoid.

Install the solenoid and capscrews.

Torque Value: 3.4 n·m [30 in-lb]

Connect the ring terminal to the fuel shutoff valve solenoid.

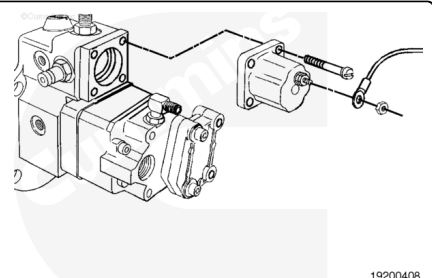

Last Modified: 15-Dec-2004