


Trainings ▾

General Information


The intake manifold air pressure (1) and intake manifold air temperature (2) is located on the top front half of the intake manifold. The ECM uses this information for the engine protection system.

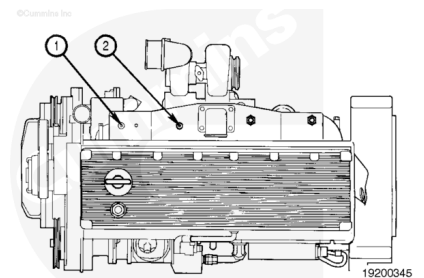

Remove

Lift up on the tab and disconnect the connector from the sensor.

Remove the sensor from the air intake manifold with deep flank drive socket, Part No. 3823843.

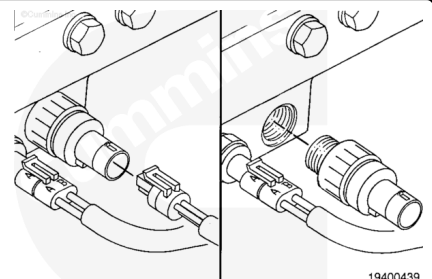


Install


Make sure the new sensor has an o-ring around the surface where it seals against the air intake manifold.

Install the sensor into the air intake manifold by turning it **clockwise**.

Torque Value: 14 n•m [124 in-lb]

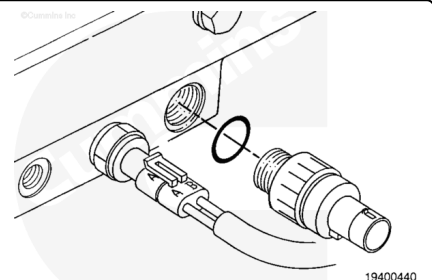

Push the harness connector into the sensor until it locks.

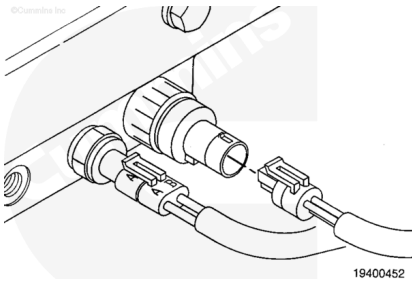

Last Modified: 03-Jun-2002
