


Trainings ▾

General Information


The ECM receives constant voltage from the batteries through the unswitched battery wires that are connected directly to the (+) positive battery post. There are two in-line 15-amp fuses in each of the unswitched battery wires to protect the ECM. The ECM receives switched battery input through the vehicle keyswitch wire when the vehicle keyswitch is turned on. The battery return wires are connected directly to the (-) negative battery post.

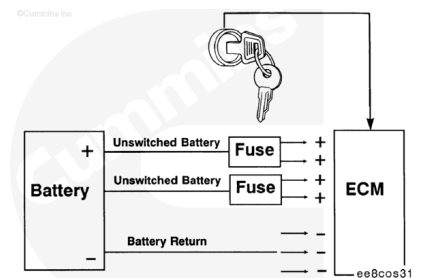

The unswitched battery wires and the battery return wires are in the OEM harness.


Always check the unswitched battery supply fuses when troubleshooting the ECM and power supply circuits.

Check the battery voltage. Refer to Procedure 019-008 (</qs3/pubsys2/xml/en/procedures/82/82-019-008.html>).

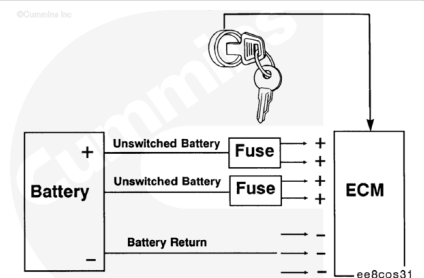

Resistance Check

Disconnect the OEM harness from the ECM.

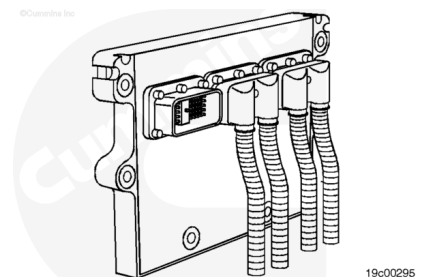


Adjust the multimeter to measure resistance.

Insert one test lead into pin 29 of the OEM harness connector and connect it to the multimeter probe. Touch the other multimeter probe to the engine block ground and measure the


resistance. The multimeter **must** show a closed circuit of 10 ohms or less.

Test pins 29, 30, 39, 40, and 50 in the same manner.

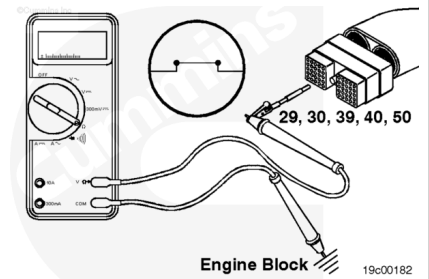


If the resistance value is **not** correct, check the batteries, cables, and cable connections.


Repair or replace the parts as required.

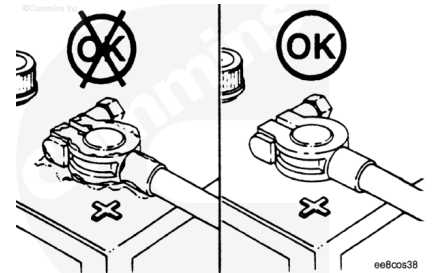

When the checks have been completed, connect the OEM harness connector to the ECM.

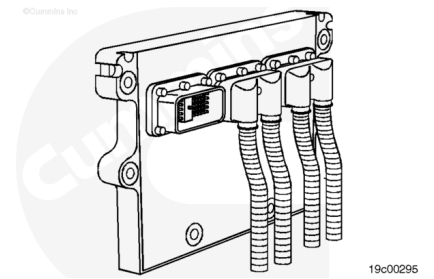


Check the battery return wires in the OEM harness for proper grounding. Disconnect the harness from the ECM. Check for damaged pins in the ECM and the harness.

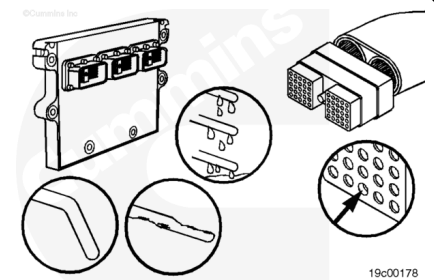

Voltage Check

Check the battery voltage supply at the 50-pin OEM harness connector.

Turn the keyswitch to the OFF position. Disconnect the 50-pin OEM harness connector from the ECM. Set the multimeter to measure VDC.

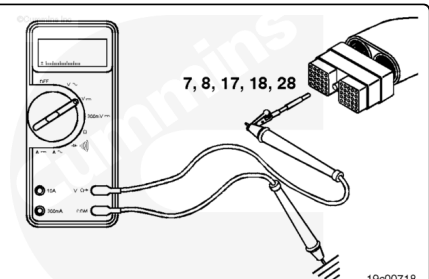

Measure the voltage from pin 7 of the OEM harness connector to ground. Repeat the voltage check from pin 8, 17, 18, and 28.

The voltage **must** read battery voltage at pin 7, 8, 17, 18, and 28.

Last Modified: 27-Jun-2002
