


Trainings ▾

Remove

Disconnect the oil pressure/temperature sensor from the sensor harness.

Remove the sensor.

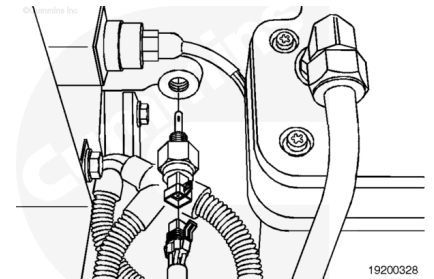

Install

Install the oil pressure/temperature sensor.

Torque Value: 14 n•m [124 in-lb]

Connect the sensor to the sensor harness. An audible click will be heard when the connector locks in place.

