


Trainings ▾

Remove

⚠ WARNING ⚠

Drain the air compressor tank and all lines before removing or installing the wet tank pressure sensor. Failure to drain the air compressor tank and lines of pressure could result in personal injury, mechanical damage, or electrical damage, or all of the above.

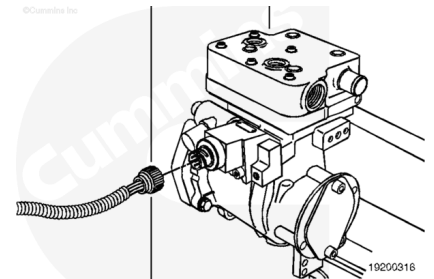


The wet tank pressure sensor is nonserviceable. It **must** be replaced by changing the electronic air compressor governor. Refer to Procedure 019-169 (</qs3/pubsys2/xml/en/procedures/82/82-019-169.html>).

Install

⚠ WARNING ⚠

Drain the air compressor tank and all lines before removing or installing the wet tank pressure sensor. Failure to drain the air compressor tank and lines of pressure could result in personal injury, mechanical damage, or electrical damage, or all of the above.

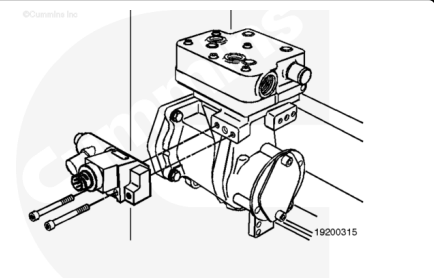

The wet tank pressure sensor is nonserviceable. It **must** be replaced by changing the electronic air compressor governor. Refer to Procedure 019-169 (</qs3/pubsys2/xml/en/procedures/82/82-019-169.html>).

