


Trainings ▾

Resistance Check

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first, and attach the negative (-) battery cable last.

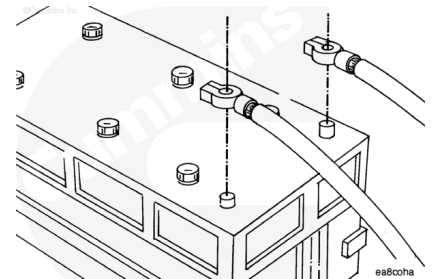


Turn the keyswitch to the OFF position.

Disconnect the vehicle battery cables from the battery.

Note : Disconnecting the vehicle battery connections may require that the engine ECM real-time clock be reset using INSITE™.

⚠ CAUTION ⚠

To reduce the possibility of pin and harness damage, use test leads, Part Number 3822758 and 3822917, when taking a measurement.

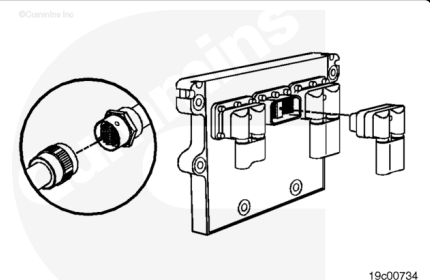

Verify that the neutral position switch, the hood tilt switch, and the parking brake switch are closed.


Disconnect the ICON™ starter relay from the OEM harness.

Disconnect the 31-pin OEM connector. Disconnect the actuator harness connector from the ECM.

Set the multimeter to measure resistance.

Check the OEM harness portion of the circuit.

Touch one of the multimeter leads to pin 85 of the ICON™ starter relay harness connector, OEM harness side, or the equivalent pin on the OEM 31-pin connector side of the relay. Refer to the ISM wiring diagram, Bulletin 3666269.

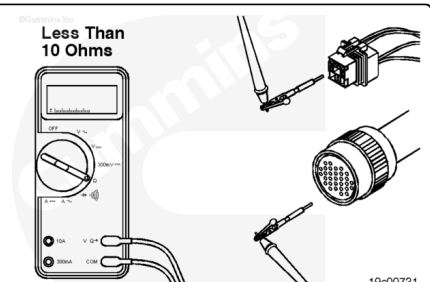

Touch the other multimeter lead to pin 27 of the 31-pin OEM connector, OEM harness side.


Read the value displayed on the multimeter.

The multimeter **must** display a reading of less than 10 ohms, which is a closed circuit.

If the circuit is **not** closed, repair or replace the OEM harness.

Refer to Procedure 019-071

(/qs3/pubsys2/xml/en/procedures/82/82-019-071.html).

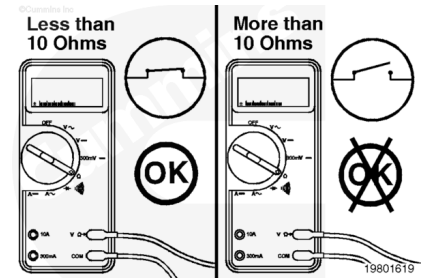


Check the engine harness portion of the circuit.

Verify that the 6-pin ICON™ shorting plug is installed.

Touch the multimeter lead to pin 27 of the 31-pin OEM connector, engine harness side. Touch the other multimeter lead to pin 14 of the actuator harness connector.

The multimeter **must** display a reading of less than 10 ohms, which is a closed circuit.


If the circuit is **not** closed, check the ICON™ shorting plug for continuity.

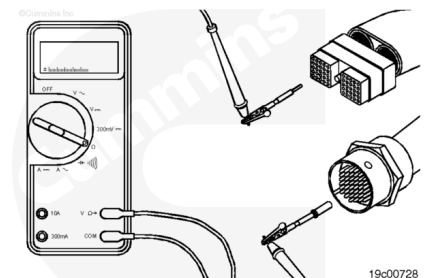

Disconnect the ICON™ shorting plug from the 6-pin engine harness connector.

Touch the multimeter lead to pin 5 of the ICON™ shorting plug. Touch the other multimeter lead to pin 4 of the ICON™ shorting plug. Read the value displayed on the multimeter.


The multimeter **must** display a reading of less than 10 ohms, which is a closed circuit. If the circuit is **not** closed, repair or replace the shorting plug. Refer to Procedure 019-206 (/qs3/pubsys2/xml/en/procedures/99/99-019-206.html). If the circuit is closed, the problem is in the harness. Repair or replace the OEM harness. Refer to Procedure 019-071 (/qs3/pubsys2/xml/en/procedures/82/82-019-071.html).

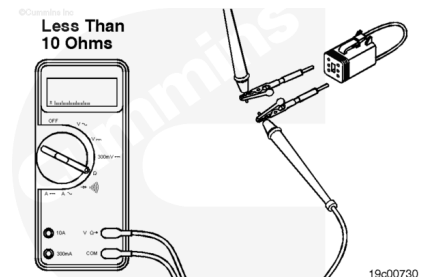

Disconnect the OEM harness connector from the ECM.

Touch one of the multimeter lead to pin 33 of the 50-pin OEM harness connector, OEM harness side.

Touch the other multimeter lead to the corresponding pin of the ICON™ starter relay harness connector, OEM harness (nearest to ECM) side. Read the value displayed on the multimeter.

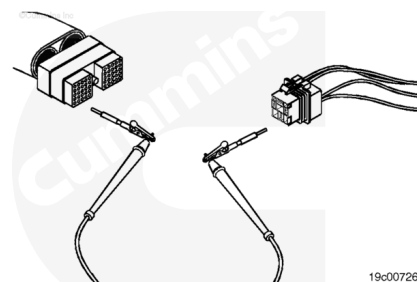


The multimeter **must** display a reading of less than 10 ohms, which is a closed circuit.

If the circuit is **not** closed, repair or replace the OEM harness.

Refer to Procedure 019-071

(/qs3/pubsys2/xml/en/procedures/82/82-019-071.html).

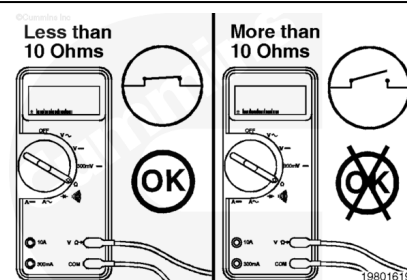

Touch the multimeter lead to pin 33 of the 50-pin OEM harness connector.

Touch the other multimeter lead to pin 20 of the 31-pin OEM harness connector, OEM side. Read the value displayed on the multimeter.

The multimeter must display a reading of less than 10 ohms, which is a closed circuit. If the circuit is not closed, repair or replace the OEM harness. Refer to Procedure 019-071 (/qs3/pubsys2/xml/en/procedures/82/82-019-071.html).

Connect all components after completing the repair.

