


Fault Code: 198

ICON™ Lamp

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 198 PID(P): S122, 3 SPN: 612 FMI: 3 Lamp: Yellow SRT:	High voltage detected at the ICON™ lamp circuit when low voltage was expected by the ECM.	The ICON™ system will be disabled. Only mandatory shutdown will be enabled.

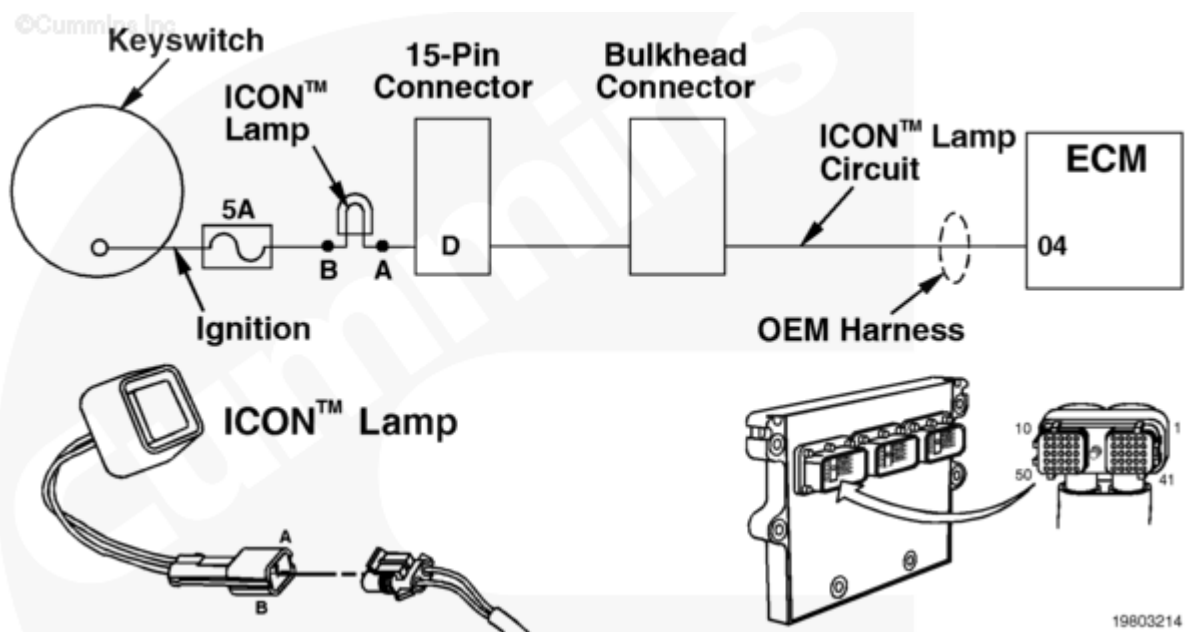

ICON™ Lamp Circuit

Circuit Description

The ICON™ lamp circuit illuminates the ICON™ lamp to indicate when the ICON™ system is active. In addition, ICON™ fault codes will be flashed out on this lamp. The lamp circuit requires a specific flash timing (on/off timing). If the on/off voltage is incorrect, ICON™ will be disabled. The lamp circuit **must** be functional to enable ICON™.

Component Location

The ICON™ lamp is located in the vehicle cab on the dash panel.

Shoptalk

This fault indicates a short circuit to battery voltage. The ICON™ lamp will **only** flash out the active fault codes.

Refer to Troubleshooting Fault Code t05-198 (</qs3/pubsys2/xml/en/procedures/82/82-t05-198.html>)

Last Modified: 02-Sep-2010
