


Fault Code: 218

Wet Tank Pressure Sensor Circuit

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 218 PID(P): P046 SPN: 46 FMI: 2/2 Lamp: Yellow SRT:	Voltage at wet tank pressure signal indicates wet tank pressure is too high or too low.	Air compressor will run continuously.

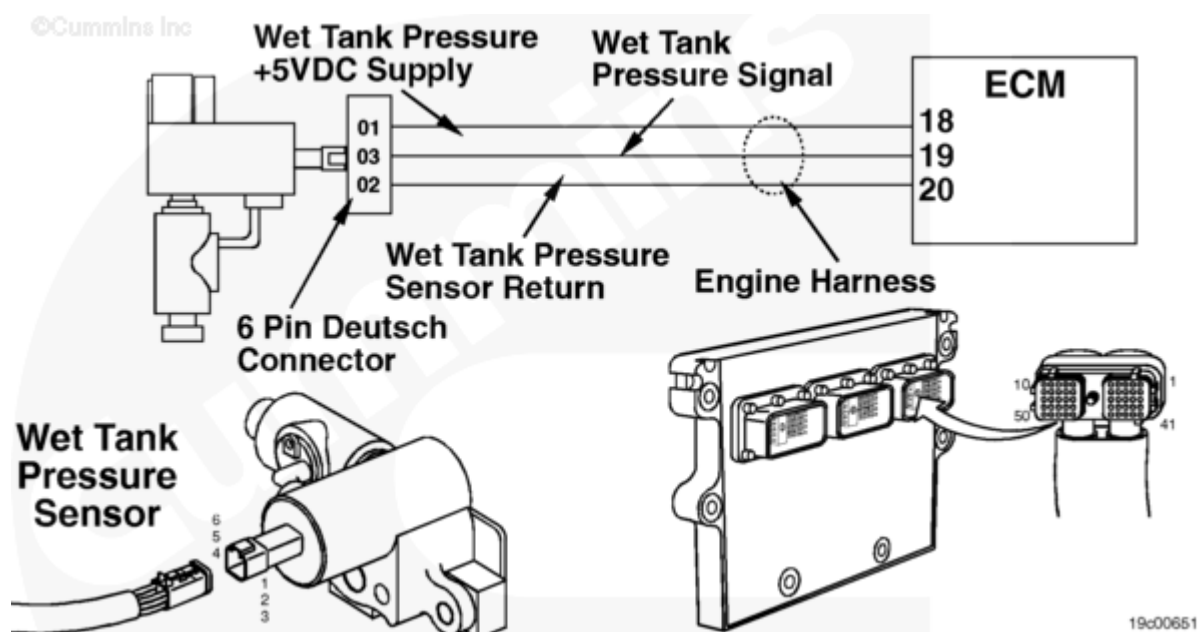

Wet Tank Pressure Sensor Circuit

Circuit Description

The wet tank pressure sensor provides the wet tank pressure sensor signal to the electronic control module (ECM).

Component Location

The wet tank pressure sensor is located on the air compressor. It is part of the electronic air governor and is nonserviceable.

Shoptalk

This fault indicates that the pressure in the wet tank is lower or higher than specifications.

Refer to Troubleshooting Fault Code t05-218 (</qs3/pubsys2/xml/en/procedures/82/82-t05-218.html>)

Last Modified: 02-Sep-2010
