


Fault Code: 256

Ambient Air Temperature Sensor Circuit

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 256 PID(P): P171 SPN: 171 FMI: 4/4 Lamp: Yellow SRT:	Low voltage detected at the ambient air temperature circuit.	No effect on engine performance. The idle shutdown ambient air temperature override feature will use the intake manifold air temperature sensor value to determine idle shutdown and availability of override (automotive only).

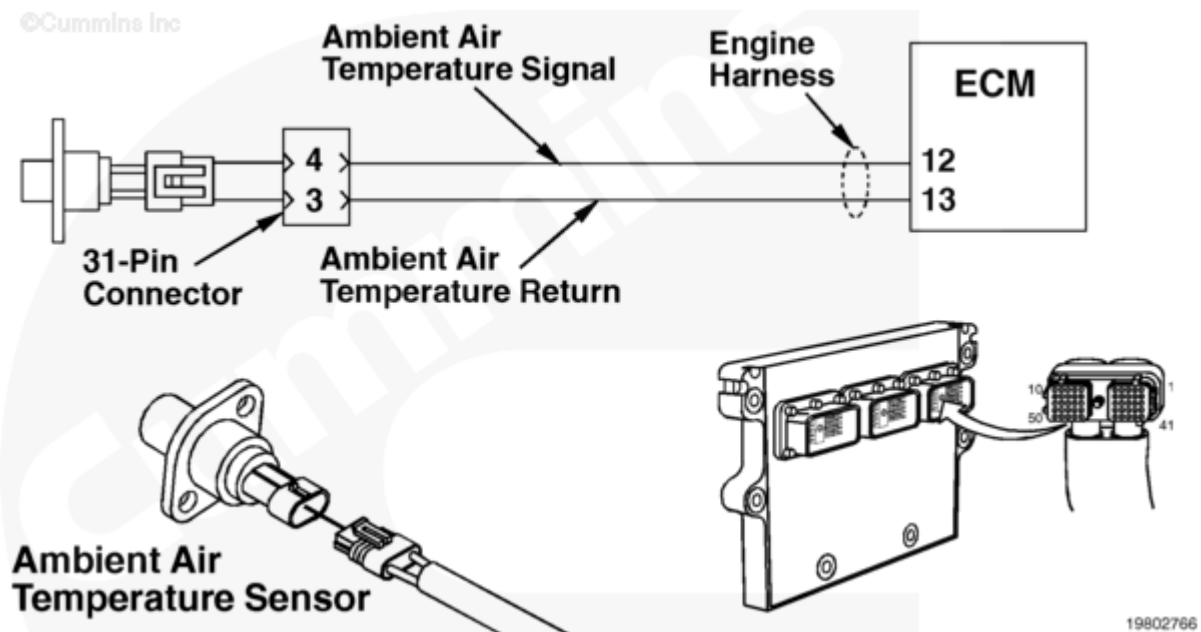

Ambient Air Temperature Sensor Circuit

Circuit Description

The ambient air temperature sensor is used by the electronic control module (ECM) to monitor the temperature of the ambient air. The ambient air temperature signal is used by the ECM for the idle shutdown ambient air temperature override and ICON™ features.

Component Location

The ambient air temperature sensor location is OEM-dependent. Refer to the OEM troubleshooting and repair manual.

Shoptalk

The resistance of the sensor varies with the temperature. The reading you observe should compare to this table:

Temperature (°C)	Temperature [°F]	Resistance (ohms)
0	32	30k to 36k
25	77	9k to 11k
50	122	3k to 4k
75	167	1350 to 1500
100	212	600 to 675

Refer to Troubleshooting Fault Code t05-256 (</qs3/pubsys2/xml/en/procedures/82/82-t05-256.html>)