


Fault Code: 339

Ignition Bus Relay Circuit

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 339 PID(P): S087, 4 SPN: 1267 FMI: 4 Lamp: Yellow SRT:	Less than 6 VDC detected at the ignition bus relay output circuit when the high voltage was expected by the ECM.	The ICON™ will be disabled. Only mandatory shutdown will be enabled. Constant power will be at the keyswitch ignition circuit.

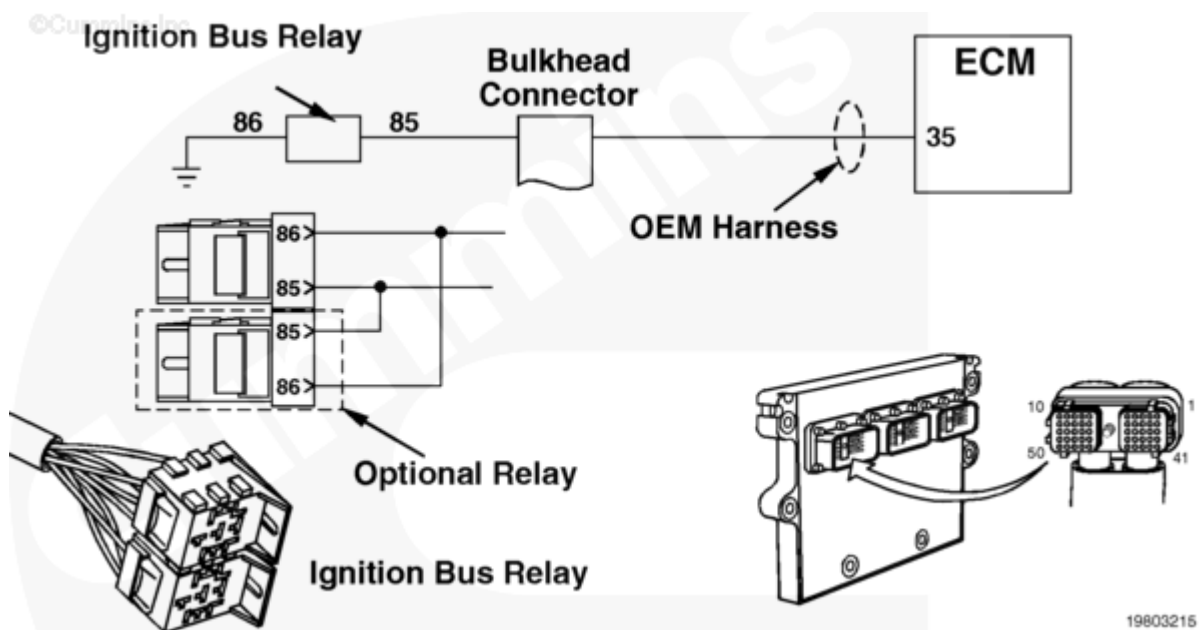

Idle Shutdown Vehicle Accessory/Ignition Bus Relay Circuit

Circuit Description

The ignition bus relay controls ignition circuits powering the heating/air conditioning controls and other equipment connected to the ignition bus relay(s). This relay(s) is controlled by ignition relay positive (+) signal from the ECM OEM connector pin 35.

Component Location

The ignition bus relay is located under the dash inside the vehicle cab.

Shoptalk

This fault typically indicates a short circuit to ground or an open circuit from the ECM connector pin 35 (ignition relay positive (+)). Ignition relay positive (+) (pin 35) outputs 12 VDC to open the ignition bus relay(s) when ICON™ has powered down the vehicle and needs to disconnect power going to the cab circuit. The ICON™ bus relay(s) is normally closed when no power is applied.

Refer to Troubleshooting Fault Code t05-339 (</qs3/pubsys2/xml/en/procedures/82/82-t05-339.html>)

Last Modified: 02-Sep-2010
