


Fault Code: 429

Water-In-Fuel (WIF) Sensor Circuit

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 429 PID(P): P097 SPN: 97 FMI: 4/4 Lamp: Yellow SRT:	Low voltage detected at water-in-fuel (WIF) sensor circuit.	None on performance.

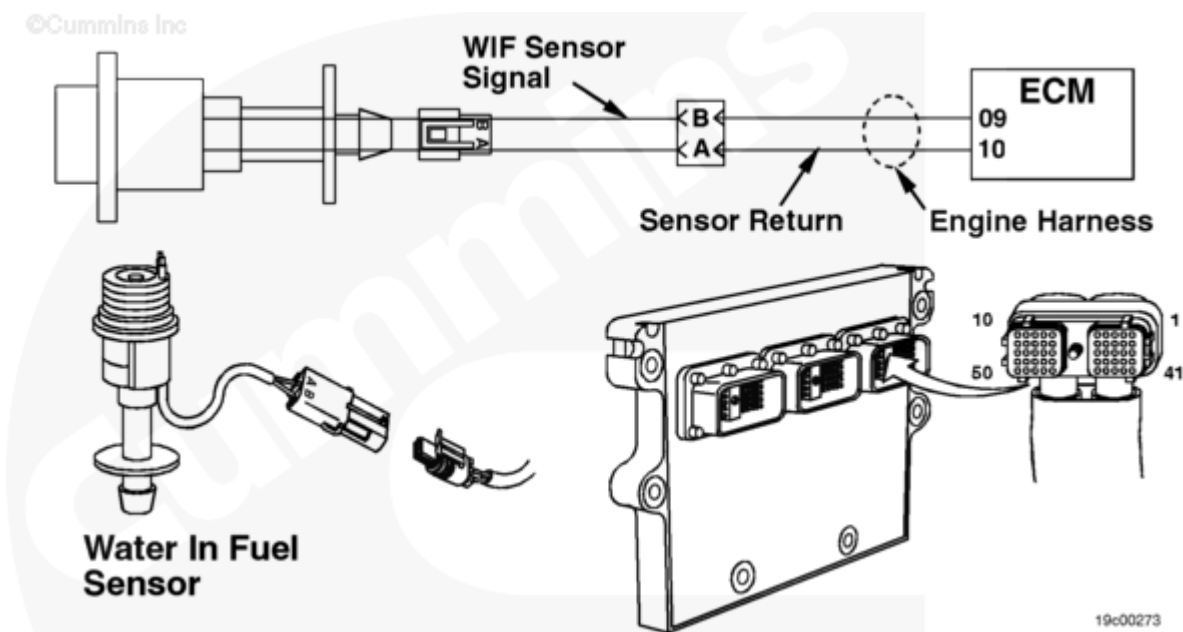

WIF Sensor Circuit

Circuit Description

The WIF sensor is attached to the fuel filter. The WIF sensor sends a signal to the electronic control module (ECM) when a set volume of water has accumulated in the fuel filter. The WIF circuit contains two wires: A return ground (pin 10) and a signal wire (pin 9).

Component Location

The WIF sensor is installed in the fuel filter and is located on the side of the head approximately midengine.

Shoptalk

The WIF sensor uses the same internal ECM power supply as sensors on engine harness. If Fault Code 352 is also active, use that troubleshooting logic and tree.

Refer to Troubleshooting Fault Code t05-429 (</qs3/pubsys2/xml/en/procedures/82/82-t05-429.html>)

Last Modified: 02-Sep-2010
