


Fault Code: 492

Wastegate Actuator Number 2 Circuit

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 492 PID(P): S088 SPN: 1189 FMI: 4/4 Lamp: Yellow SRT:	Less than + 6 VDC detected at the wastegate actuator number 2 circuit when activated indicates an excessive current draw from the electronic control module (ECM) or faulty ECM output circuit.	Engine will run derated.

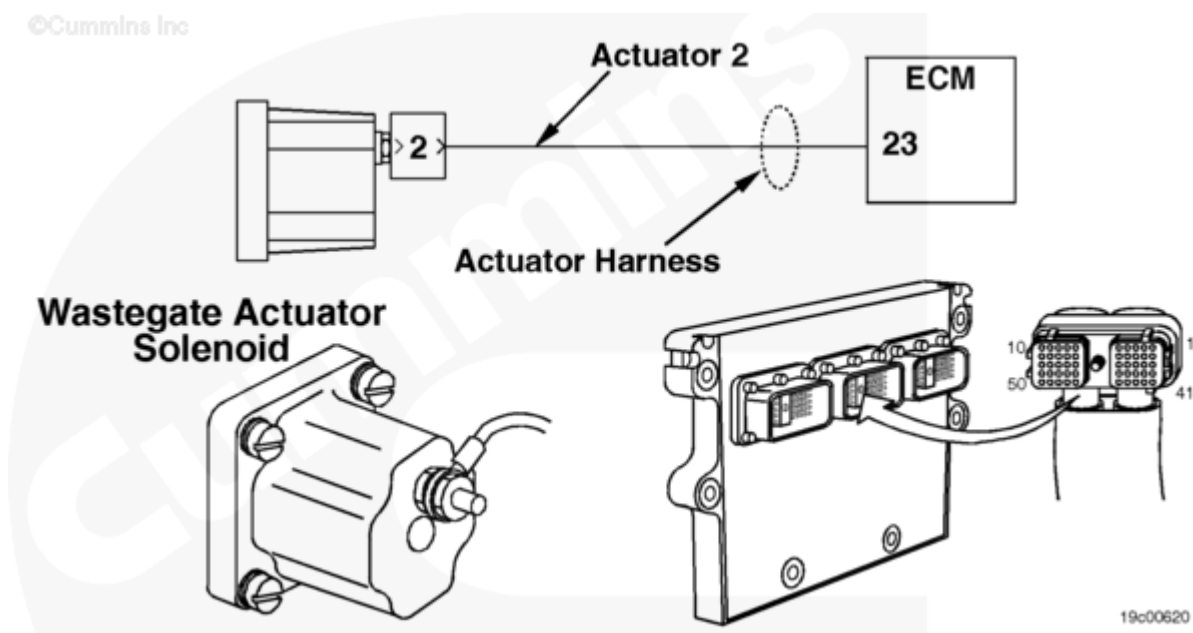

Wastegate Actuator Number 2 Circuit

Circuit Description

The wastegate actuators are devices used by the ECM to control boost pressure.

Component Location

The wastegate controller is located on the air inlet horn. Actuator number 2 is the rear-most solenoid on the controller.

Shoptalk

- Inspect the engine block to chassis ground wire to make sure it is securely fastened to a clean, dry surface.
- Check the starter solenoid + terminal for a loose connector or accessory wiring with damaged insulation.
- Low voltage can be caused by short circuit to ground, a short circuit to another wire in the harness, or a shorted solenoid coil.
- Inspect the wastegate actuator number 2 circuit for external wires that can be spliced into powering another device. Remove any extra wires that are found in the circuit.

Refer to Troubleshooting Fault Code t05-492 (</qs3/pubsys2/xml/en/procedures/82/82-t05-492.html>)

Last Modified: 02-Sep-2010
