


Trainings ▾

Initial Check

Connect the INSITE™ electronic service tool to the vehicle datalink.


Turn the keyswitch to the ON position.

Monitor the ambient air pressure. If the ambient air pressure is less than or equal to 523 mm HG [20.6 in HG] and the present elevation is less than 3048 m [10,000 ft], replace the ambient air pressure sensor.

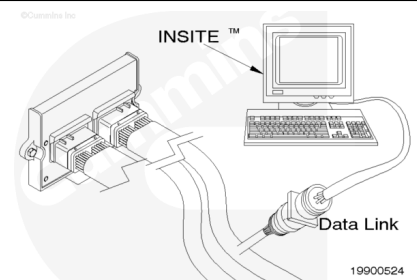


Remove

Lift up on the tab and disconnect the connector from the sensor.

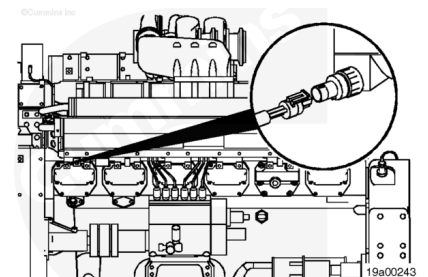

Remove the sensor from the engine.

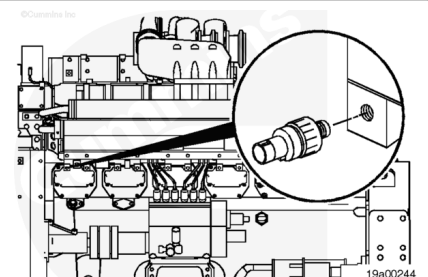


Install

Install a new sensor on the engine.

Tighten the sensor.

Torque Value: 23 n•m [204 in-lb]

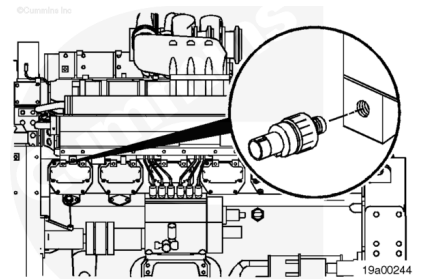

Push the connectors together until they lock. An audible click will be heard when the connector locks in place.

