


Trainings ▾


Remove

Remove the hose clamps that attach the blowby pressure sensor to the engine.

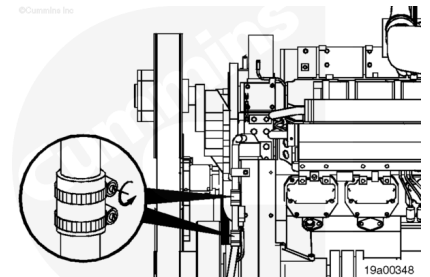

Lift up on the locking tab and pull the electrical connectors apart.


Remove the sensor.

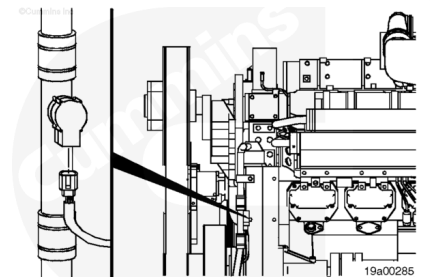

Install


⚠ CAUTION ⚠

Use only Cummins-recommended lubricant DS-ES, Part Number 3822934. Other lubricants, such as lubricating oil or grease, in the connectors can cause ECM damage, poor engine performance, or premature connector pin wear.

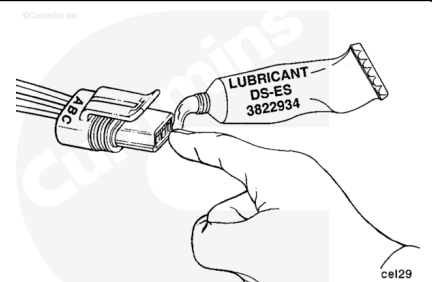

Apply a small amount of lubricant to the connector terminals. Before installing, fill the entire connector cavity with lubricant.

Install the sensor on the engine. Install and tighten the hose clamps.

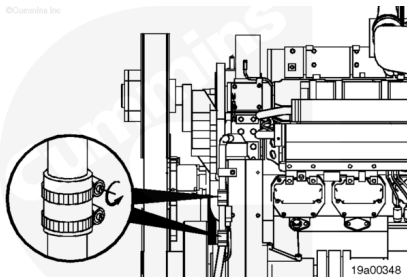

Push the connectors together until they lock.

