



Trainings ▾

Remove

Disconnect the sensor from the engine harness.

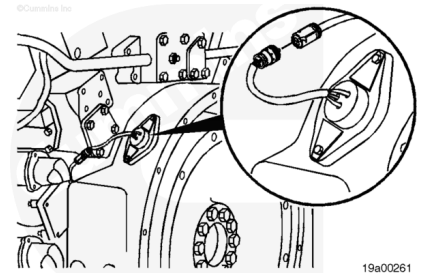


Remove the mounting bolts and remove the engine position sensor (EPS) from the flywheel housing.

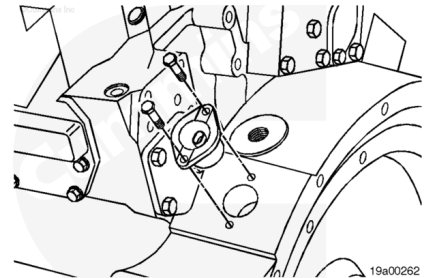


Install

Install new o-ring onto the engine position sensor.

Lubricate the o-ring with clean engine oil.

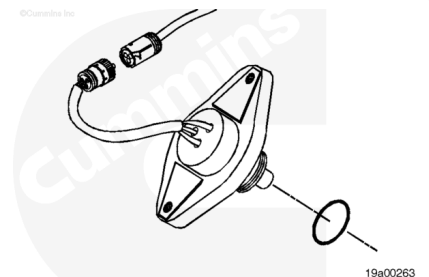


Install the new sensor into the EPS capsule assembly until it is flush with the bottom, outside surface.

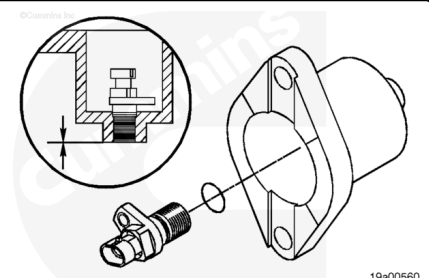

Install the assembly into the mounting hole in the flywheel housing.

Tighten the EPS capsule mounting bolts.

Torque Value: 20 n•m [177 in-lb]

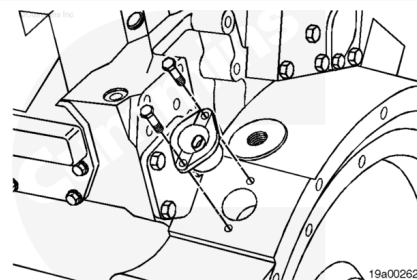


Note : Check that the sensor is not over one of the sensing holes in the flywheel.

Thread the engine position sensor down through the capsule until it contacts the flywheel. Back the sensor off until its lock hole is aligned with the capscrew hole in the capsule.


Install the locking capscrew and tighten.

Torque Value: 7 n•m [62 in-lb]

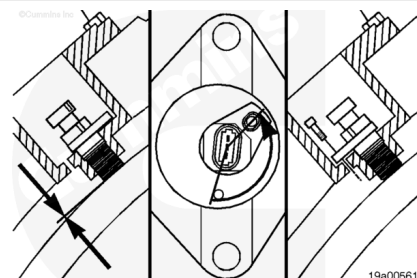

⚠ CAUTION ⚠

Use only Cummins-recommended lubricant DS-ES, Part Number 3822934. Other lubricants, such as lubricating oil or grease, in the connectors can cause ECM damage, poor engine performance, or premature connector pin wear.

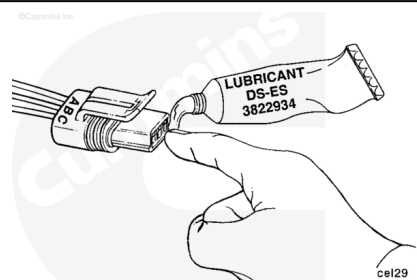

Apply a small amount of lubricant to the connector terminals. Before installing, fill the entire connector cavity with lubricant.

Connect the engine position sensor connector to the engine harness.

