


Trainings ▾

Resistance Check

⚠ CAUTION ⚠

To reduce the possibility of pin and harness damage, use test lead, Part Number 3823993, on the 31-pin connector, and test lead, Part Number 3822758, on the 50-pin connector, when taking a measurement.

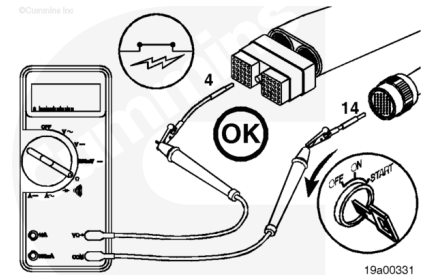


Turn the vehicle keyswitch to the OFF position. Disconnect the OEM interface harness and the engine harness from the ECM. Disconnect the OEM harness from the OEM interface harness at the 31-pin connector.

Measure the resistance from pin 4 of the 50-pin OEM interface harness connector to pin 14 of the 31-pin OEM interface harness connector, interface harness side. The multimeter **must** show a closed circuit (10 ohms or less).

If the circuit is **not** closed, repair or replace the engine harness.

Refer to Procedure 019-231


(/qs3/pubsys2/xml/en/procedures/87/87-019-231.html) or 019-250 (/qs3/pubsys2/xml/en/procedures/87/87-019-250.html) to repair the harness. Refer to Procedure 019-043 (/qs3/pubsys2/xml/en/procedures/87/87-019-043.html) to replace the harness.

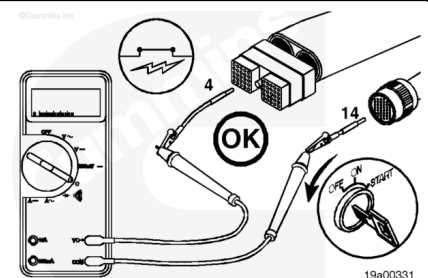

Check for Short Circuit to Ground

⚠ CAUTION ⚠

Do not use probes or test leads other than Part Number 3822758. The connector will be damaged. The leads must fit tightly in the connector without expanding the pins in the connector.

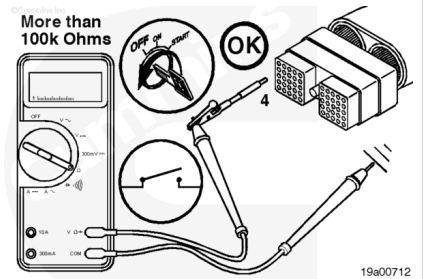


Turn the vehicle keyswitch to the OFF position. Disconnect the OEM and engine harnesses from the ECM. Disconnect the OEM harness from the OEM interface harness at the 31-pin connector.

Insert the test lead into pin 4 of the 50-pin OEM interface harness connector, and attach it to the multimeter probe. Touch the other multimeter probe to the engine block.

The multimeter **must** show an open circuit (100k ohms or more). If the circuit is **not** open, repair or replace the engine harness.

Refer to Procedure 019-250
(/qs3/pubsys2/xml/en/procedures/87/87-019-250.html) or
019-043 (/qs3/pubsys2/xml/en/procedures/87/87-019-043.html).

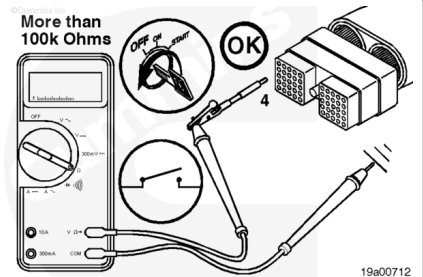


Voltage Check

⚠ CAUTION ⚠

Do not use probes or leads other than Part Number 3822758. The connector will be damaged. The leads must fit tightly in the connector without expanding the pins in the connector.


Disconnect the OEM and engine harnesses from the ECM. Turn the vehicle keyswitch to the ON position. Set the multimeter to measure VDC.

Insert a test lead into pin 4 of the OEM harness connector.

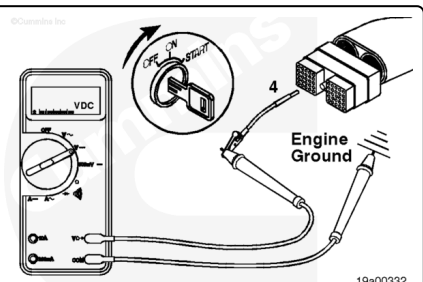

Connect the alligator clip to the positive (+) multimeter probe. Touch the negative (-) multimeter probe to the engine block. Measure the voltage. The multimeter **must** show battery voltage.

If battery voltage is **not** present, wire 4 **must** be checked for an open circuit or a short circuit to ground.

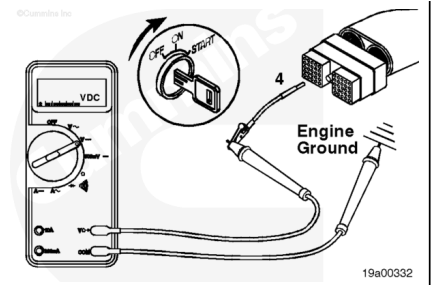

Last Modified: 10-Feb-2003
