



Trainings ▾

Remove

Lift up on the tab and disconnect the connector from the sensor.

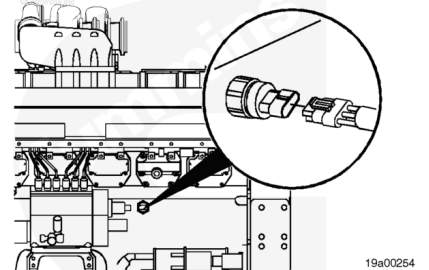


Remove the sensor from the engine block. Use a deep flank drive socket, Part Number 3823843.

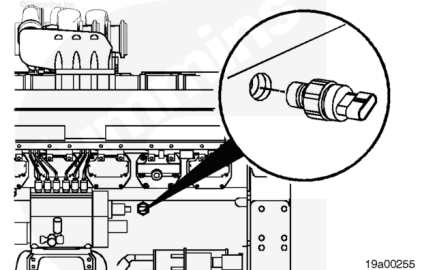

Install


Make sure the new sensor has an o-ring around the surface where it seals against the engine block.

Lubricate the o-ring with clean engine oil.

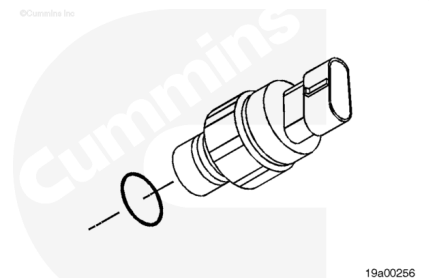


Install the sensor in the engine block.

Torque Value: 14 n•m [124 in-lb]

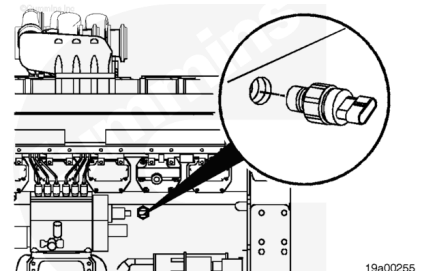

⚠ CAUTION ⚠

Use only Cummins-recommended lubricant DS-ES, Part Number 3822934. Other lubricants, such as lubricating oil or grease, in the connectors can cause ECM damage, poor engine performance, or premature connector pin wear.

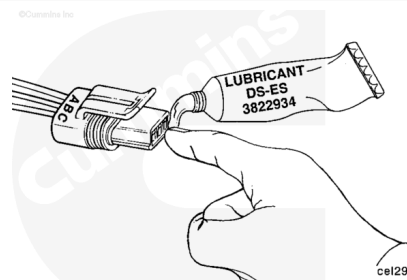

Apply a small amount of lubricant to the connector terminals.
Before installing, fill the entire connector cavity with lubricant.

Push the connectors together until they lock.

