


Trainings ▾

Remove

⚠ WARNING ⚠


Some state and federal agencies have determined that used engine oil be carcinogenic and can cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. Dispose of in accordance with federal, state, and local regulations.

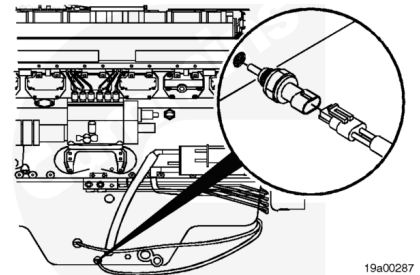

Partially drain the engine lubricating oil system. Use the following procedure in the QST30 Service Manual, Bulletin 4021539. Refer to Procedure 007-025 in Section 7.
(/qs3/pubsys2/xml/en/procedures/57/57-007-025-tr.html)

Lift up on the locking tab and pull the electrical connectors apart.

Remove the sensor.

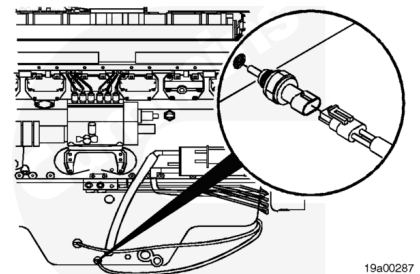


Install

Lubricate the sensor o-ring with clean engine oil.


Install the sensor into the engine. Tighten the sensor.

Torque Value: 14 n·m [124 in-lb]

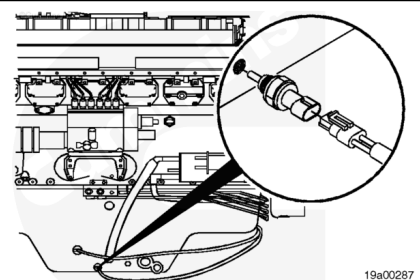

⚠ CAUTION ⚠

Use only Cummins-recommended lubricant DS-ES, Part Number 3822934. Other lubricants, such as lubricating oil or grease, in the connectors can cause ECM damage, poor engine performance, or premature connector pin wear.

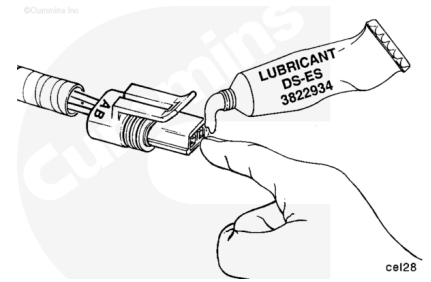

Apply a small amount of lubricant to the connector terminals.
Before installing, fill the entire connector cavity with lubricant.

Push the connectors together until they lock.

Fill the engine to the proper level with lubricating oil and
operate the engine to check for leaks.

