


Trainings ▾

Resistance Check

⚠ CAUTION ⚠

Do not use probes or test leads other than Part Number 3822758 on the ECM connectors and test lead, Part Number 3823993, on the 31-pin OEM interface harness connector. The connectors will be damaged. The leads must fit tightly in the connector without expanding the pins of the connector.

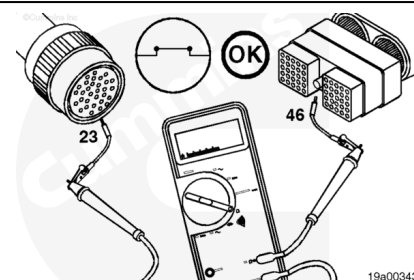


Disconnect the OEM interface harness connector from the ECM. Disconnect the 31-pin OEM interface connector.

Measure the resistance from pin 46 of the 50-pin OEM harness connector to pin 23 of the 31-pin OEM interface harness connector, engine side. The multimeter **must** show a closed circuit (10 ohms or less).

If the circuit is **not** closed, repair or replace the OEM interface wiring harness. Refer to Procedure 019-071 (</qs3/pubsys2/xml/en/procedures/99/99-019-071.html>).


Measure the resistance from pin 45 of the 50-pin OEM harness connector to pin 24 of the 31-pin OEM interface harness connector, engine side. The multimeter **must** show a closed circuit (10 ohms or less).

If the circuit is **not** closed, repair or replace the OEM wiring harness. Refer to Procedure 019-071 (</qs3/pubsys2/xml/en/procedures/99/99-019-071.html>).

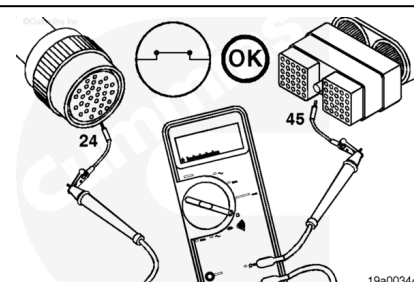

Measure the resistance from pin 17 of the 50-pin OEM harness connector to pin 25 of the 31-pin OEM interface harness connector, engine side. The multimeter **must** show a closed circuit (10 ohms or less).

If the circuit is **not** closed, repair or replace the OEM wiring harness. Refer to Procedure 019-071 (</qs3/pubsys2/xml/en/procedures/99/99-019-071.html>).

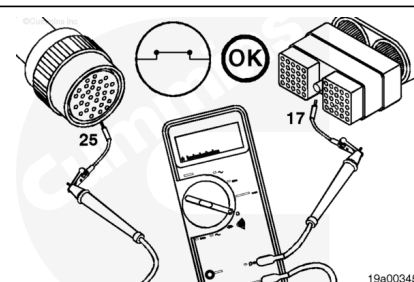


If the OEM harness on the engine side of the 31-pin OEM interface connector passes the above resistance checks, check the resistance of the vehicle side of the 31-pin OEM interface connector. Refer to the vehicle manufacturer's instructions.

Check for Short Circuit to Ground

⚠ CAUTION ⚠

Do not use probes or test leads other than Part Number 3822758. The connector will be damaged. The leads must fit tightly in the connector without expanding the pins of the connector.

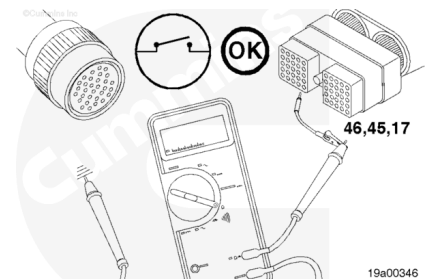

Disconnect the OEM interface connector from the ECM.

Move the ISC switch to the center (OFF) position.


Measure the resistance from pins 46, 45, and 17 of the OEM harness connector to the engine block. The multimeter **must** show 100k ohms or more.

If the circuit is **not** open, check for short circuit to ground in the OEM wiring harness, provided the switch has been checked previously.

Disconnect the 31-pin OEM interface harness connector.

Measure the resistance from pins 46, 45, and 17 of the OEM harness connector to the engine block. The multimeter **must** show 100k ohms or more.


If the circuit is **not** open, check for short circuits to ground in the vehicle side of the 31-pin OEM interface harness connector. Refer to the vehicle manufacturer's instructions.

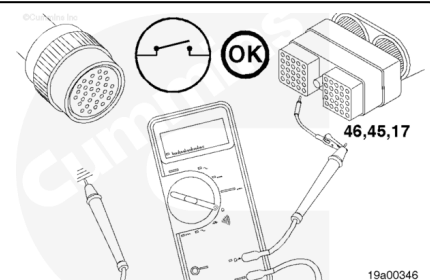

Check for Short Circuit from Pin-to-Pin

⚠ CAUTION ⚠

Do not use probes or test leads other than Part Number 3822758. The connector will be damaged. The leads must fit tightly in the connector without expanding the pins of the connector.

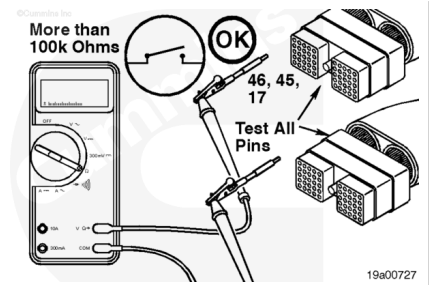

Disconnect the OEM interface harness connector and engine harness connector from the ECM.

Measure the resistance from pins 46, 45, and 17 of the OEM harness connector to all other pins in the connector. The multimeter **must** show an open circuit (100k ohms or more) at all pins.

Measure the resistance from pins 46, 45, and 17 of the OEM harness connector to all pins in the engine harness connector. The multimeter **must** show an open circuit (100k ohms or more) at all pins.

If the circuit is **not** open, check for a short circuit from pin to pin on the engine side of the 31-pin OEM interface harness connector, provided the switch has previously been checked.

Disconnect the 31-pin OEM interface harness connector.

Measure the resistance from pins 46, 45, and 17 of the OEM harness connector to all other pins in the connector. The multimeter **must** show an open circuit (100k ohms or more) at all pins.

Measure the resistance from pins 46, 45, and 17 of the OEM harness connector to all pins in the engine harness connector. The multimeter **must** show an open circuit (100k ohms or more) at all pins.

If the circuit is **not** open, check for a short circuit from pin to pin on the vehicle side of the 31-pin OEM interface harness connector. Refer to the vehicle manufacturer's instructions.

