


Fault Code: 115

Engine Speed Sensor Circuit

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 115 PID(P): P190 SPN: FMI: 2 Lamp: Red SRT:	No engine speed signal detected at pin 17 of the engine harness.	Engine will run on backup speed signal provided by engine position sensor on pin 9 of the engine harness.

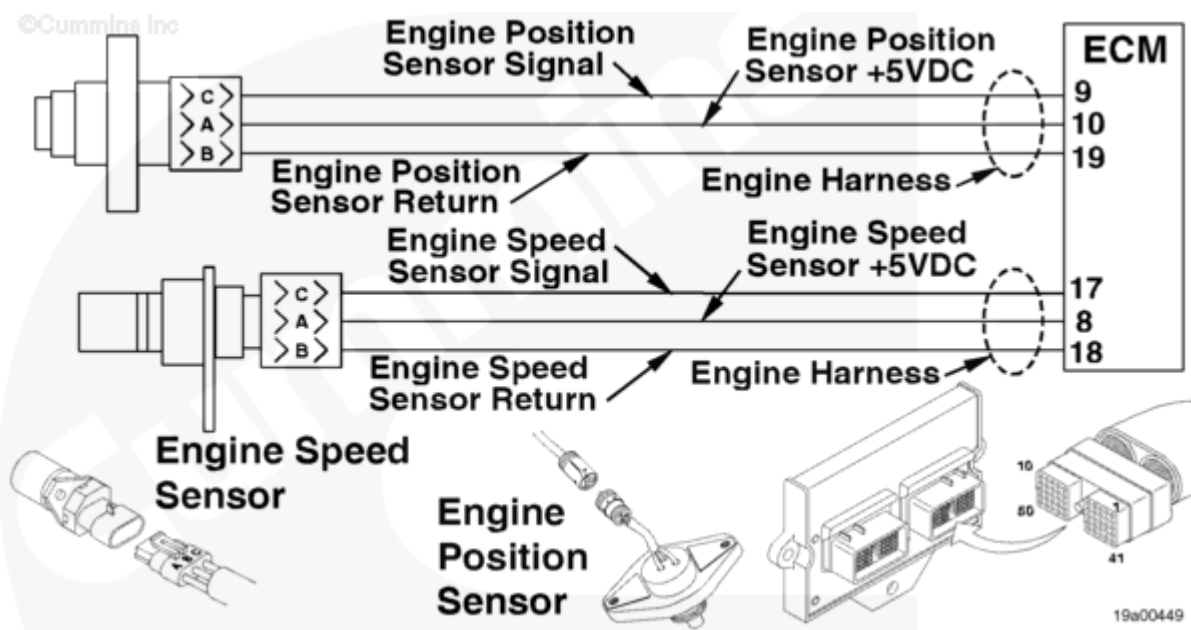

Engine Speed Sensor Circuit

Circuit Description

The engine speed sensor provides the engine speed signal to the electronic control module (ECM) through the engine harness. The sensor **must** be powered by a positive (+) 5 VDC power source to operate. The sensor generates a signal by sensing the movement of the target teeth of the flywheel. The sensor signal is 0 to 2.3 VDC between the flywheel teeth, and 4 to 5 VDC when a tooth is aligned with the sensor. A breakout cable should be used to check the engine speed sensor circuit.

Component Location

The engine speed sensor and the engine position sensor are located in the flywheel housing.

Shoptalk

The engine speed sensor provides the main engine speed signal to the ECM through the engine harness. The engine position sensor provides the backup engine speed signal to the ECM in the event of a failed engine speed sensor. The engine speed signal is generated when the engine speed sensor detects teeth on the ring gear. The engine position signal is generated by holes in the flywheel. The ECM determines the engine speed by counting the number of voltage switches for a given period of time.

Refer to Troubleshooting Fault Code t05-115 (</qs3/pubsys2/xml/en/procedures/87/87-t05-115.html>)

Last Modified: 29-Jul-2010
