


Fault Code: 143

Oil Pressure - Engine Protection

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 143 PID(P): P100 SPN: 100 FMI: 1 Lamp: Engine Protection SRT:	Low oil pressure has been detected. Voltage signal at oil pressure signal pin 33 of the engine harness indicates oil pressure lower than 41 kPa [6 psi] at engine speeds less than 600 rpm; 69 kPa [10 psi] at 800 rpm; 241 kPa [35 psi] at engine speeds greater than 1600 rpm.	Depending on calibration, progressive power derate and engine shutdown with increasing time after alert.

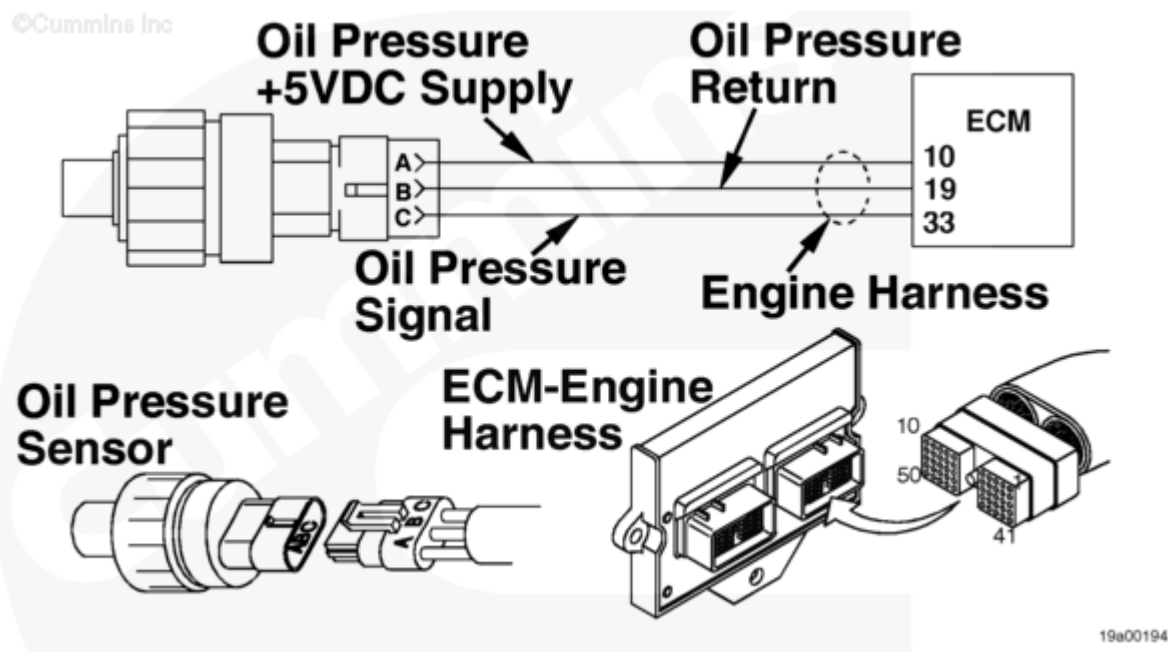

Oil Pressure Sensor Circuit

Circuit Description

The oil pressure sensor is used by the electronic control module (ECM) to monitor the lubricating oil pressure. The ECM monitors the voltage on the signal pin and converts this signal voltage to a pressure value. The oil pressure value is used by the ECM for the engine protection system.

Component Location

The oil pressure sensor is located on the left bank of the engine block to the rear of the fuel pump.

Shoptalk

- Confirm that the oil pressure sensor supply voltage is between 4.75 and 5.25 VDC at the sensor. Refer to Fault Code 141.
- Verify with the driver at what engine speed the fault occurs. If the engine is being operated at too low of a speed under load (lugging), the oil pressure can drop below the engine protection limits because of oil temperature.
- Oil pressure is a function of engine speed, oil level, and regulator function. Operating the engine at a low speed under load will **not** cause the oil pressure to be low unless oil is hot, at a low level, regulator has malfunctioned, or a loss is occurring somewhere in the system.

Note: The number of fault lamps could be reduced to two for certain OEMs. The engine protection and stop lamps are wired together as a red lamp. The warning lamp remains a yellow lamp.

Refer to Troubleshooting Fault Code t05-143 (</qs3/pubsys2/xml/en/procedures/87/87-t05-143.html>)