


Fault Code: 222

Ambient Air Pressure Sensor Circuit

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 222 PID(P): P108 SPN: 108 FMI: 4 Lamp: Yellow SRT:	Less than 0.20 VDC detected at the ambient air pressure sensor signal pin 32 of the engine harness.	No action is taken by the electronic control module (ECM).

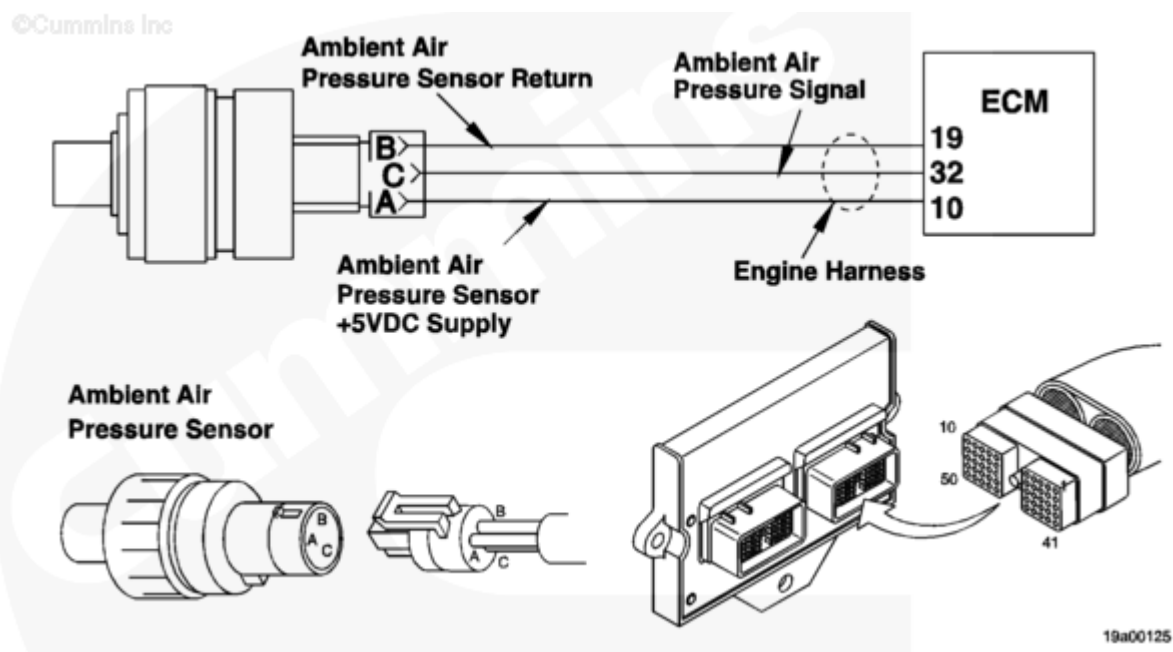

Ambient Air Pressure Sensor Circuit

Circuit Description

The ambient air pressure sensor provides the ambient air pressure signal to the ECM through the engine harness. The ECM uses the ambient air pressure sensor to adjust fueling based on the altitude.

Component Location

The ambient air pressure sensor is located on the left-hand side of the engine, on the ECM bracket.

Shoptalk

Monitor the ambient air pressure reading with an electronic service tool to confirm that the pressure reading matches the actual air pressure.

Refer to Troubleshooting Fault Code t05-222 (</qs3/pubsys2/xml/en/procedures/87/87-t05-222.html>)

Last Modified: 29-Jul-2010
