


Fault Code: 422

Coolant Level Sensor Circuit

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 422 PID(P): P111 SPN: 111 FMI: 2 Lamp: Yellow SRT:	Voltage detected simultaneously on both the coolant level high and low signal pins 27 and 37 of the engine harness, or no voltage detected on either pin.	Engine protection for coolant level is disabled.

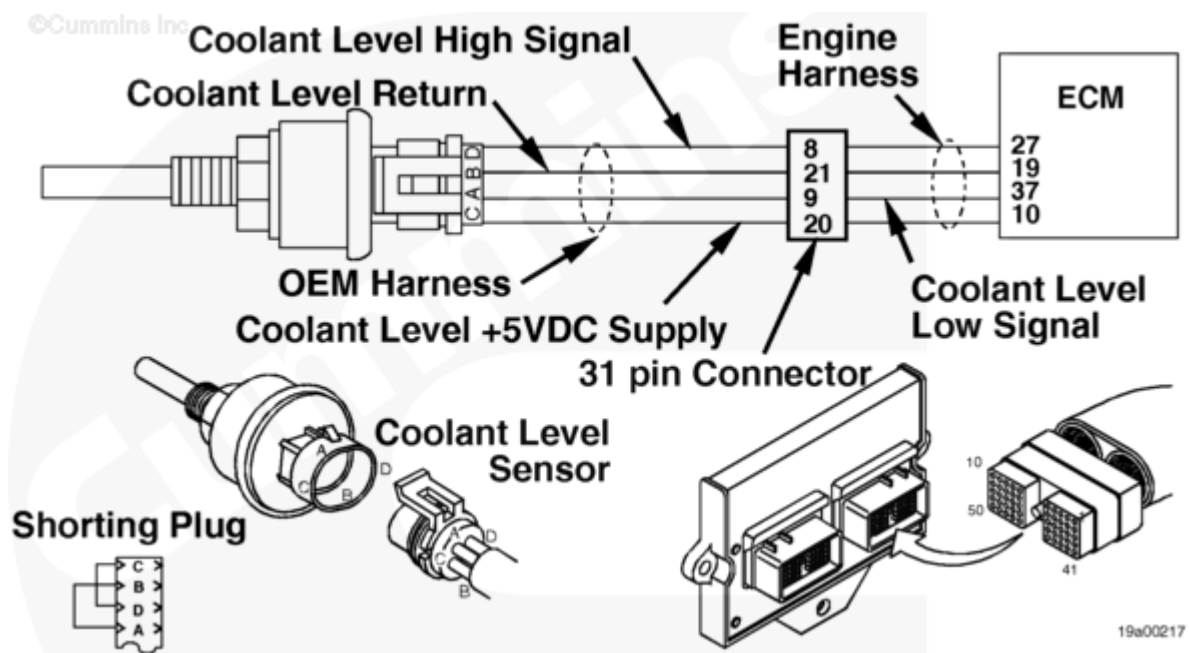

Coolant Level Sensor Circuit

Circuit Description

The coolant level sensor monitors the coolant level within the coolant system and passes information to the electronic control module (ECM) through the engine harness.

Component Location

The coolant level sensor is located in the radiator top tank or surge tank.

Shoptalk

This is an OEM-supplied component and will vary in sensor location.

- If a shorting plug is used in the coolant level circuit, verify that it is wired correctly.
- Inspect the wiring harness between the 4-pin Weather-Pack connector and the coolant level sensor for damage.

Refer to Troubleshooting Fault Code t05-422 (</qs3/pubsys2/xml/en/procedures/87/87-t05-422.html>)

Last Modified: 29-Jul-2010
