


Fault Code: 583

Fuel Pressure Sensor Circuit

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 583 PID(P): P015 SPN: FMI: 1/18 Lamp: Yellow SRT:	Fuel Pressure Sensor Circuit. Post filter pressure low - Data valid but below operational range.	Possible hard start, no start, or low power.

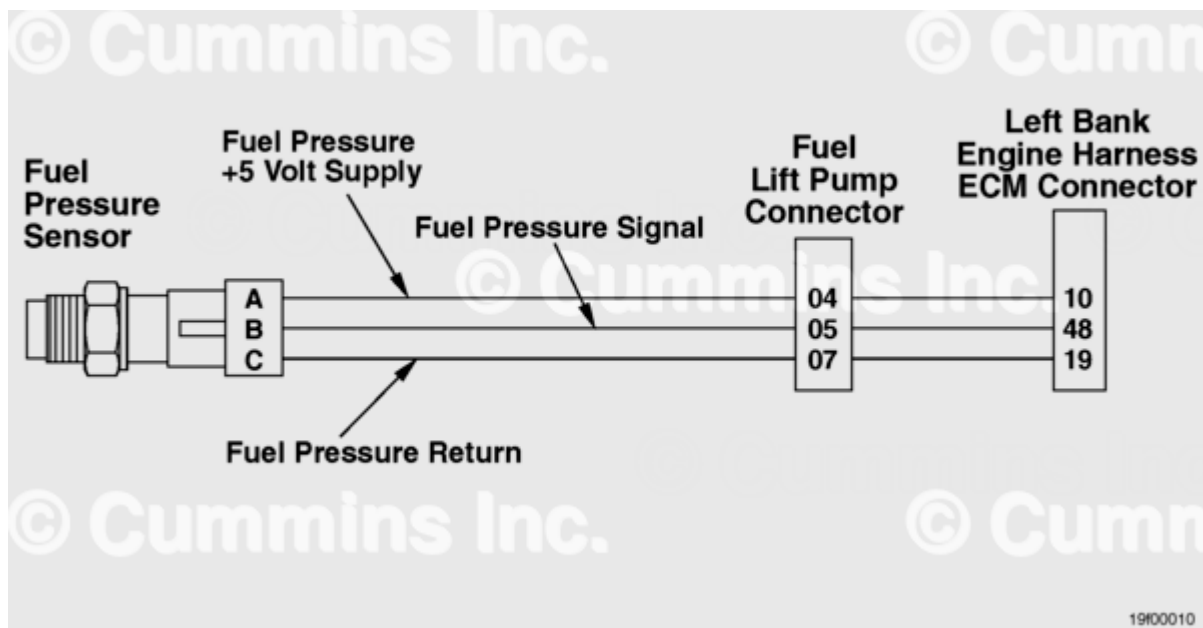

Fuel Pressure Sensor Circuit

Circuit Description

The fuel pressure sensor provides a signal to the electronic control module (ECM) to monitor fuel delivery pressure directly after the fuel filter, and before it is supplied to the fuel injection pump. The ECM monitors the voltage on the SIGNAL pin and converts this to a pressure value.

Component Location

The fuel pressure sensor is located on the outlet of the fuel filter head and before the fuel injection pump on QST30 industrial engines with electric fuel lift pumps. Use the following procedure in Service Manual, QST30, Bulletin 4021539 for fuel pressure sensor location. Refer to Procedure 100-002 in Section E. (</qs3/pubsys2/xml/en/procedures/57/57-100-002.html>)

Shoptalk

Fault Code 583 **only** applies to QST30 industrial engines with electric fuel lift pumps and a one-piece wiring harness. The fault code becomes active if fuel pressure at the sensors drops below 103 kPa [15 psi] for 35 seconds.

Low filtered fuel pressure can be caused by one of the following possible causes:

- High fuel filter restriction (plugged fuel filter)
- High fuel pre-filter restriction (plugged pre-filter)
- High fuel supply hose restriction
- Damaged or malfunctioning fuel lift pump(s)
- Air in fuel.

Refer to Troubleshooting Fault Code t05-583 (</qs3/pubsys2/xml/en/procedures/87/87-t05-583.html>)