

Trainings ▾


Initial Check

Connect an electronic Service Tool to the data link connector.

Place the Stop/Run Switch in the "Run" position.

Controller **not** in the diagnostic mode.

Start the engine and let it idle.

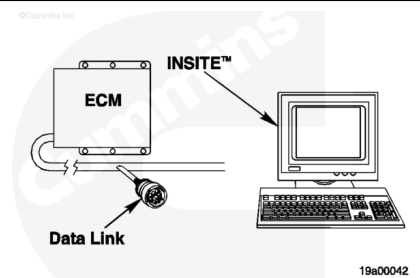


Monitor the coolant temperature with the electronic Service Tool.

Compare the cool temperature value with the water temperature gauge, or connect a temperature probe to the engine near the coolant temperature sensor and compare the reading on the service tool with the temperature probe reading.


If the coolant temperature on the electronic Service Tool is excessively higher than the water temperature, replace the coolant temperature sensor.

If the coolant temperature on the electronic Service Tool does **not** increase with the water temperature, replace the coolant temperature sensor.

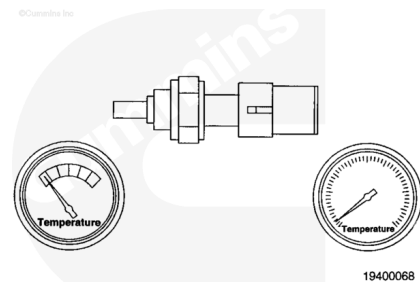

Remove the coolant temperature sensor. Refer to Procedure 019-019-002 (</qs3/pubsys2/xml/en/procedures/94/94-019-019.html>).

Connect the coolant temperature sensor to the engine harness.

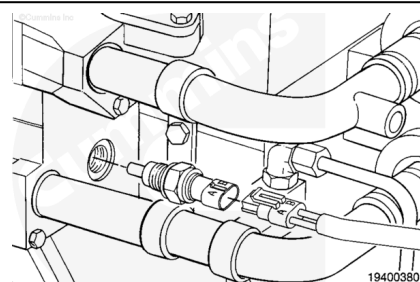


Connect an electronic Service Tool to the data link.

Place the Stop/Run switch in the "STOP" position.

Controller in the diagnostic mode.

Monitor the coolant temperature with the electronic Service Tool.

If the coolant temperature does not decrease to the current ambient air temperature, replace the coolant temperature sensor.

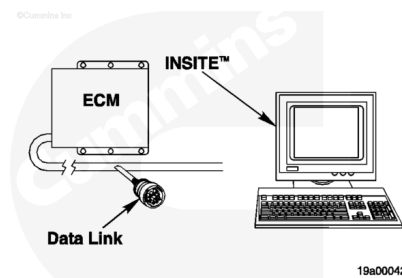


Remove

⚠ WARNING ⚠


Wait until the coolant temperature is below 50° C [120° F] before removing the coolant system pressure cap. Failure to do so can cause personal injury from heated coolant spray.

Drain the cooling system. Refer to the Base Engine Troubleshooting and Repair Manual.

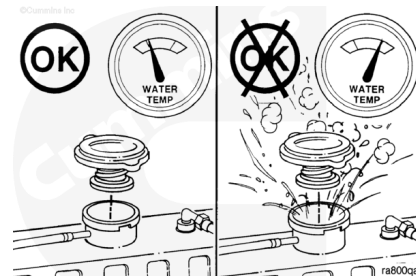

Lift up on the locking tab and pull the electrical connectors apart.

Remove the sensor.

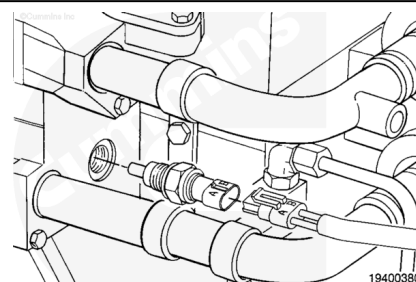


Install

Make sure the new sensor has an o-ring installed.

Lubricate the o-ring with clean engine oil.


Install the new sensor into the engine. Tighten the sensor.

Torque Value: 14 n•m [10 ft-lb]

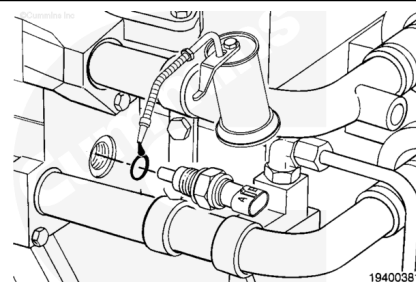

Push the connectors together until they lock.

Fill the cooling system and operate the engine to check for leaks. Refer to Base Engine Troubleshooting and Repair Manual for proper procedures.

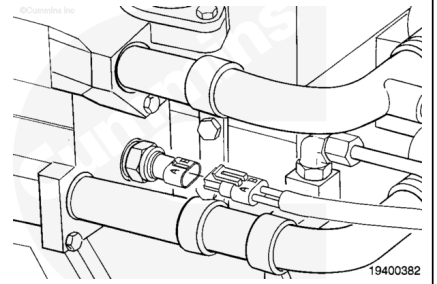

Last Modified: 24-Mar-2003
