


Trainings ▾

Remove


Disconnect the original equipment manufacture (OEM) harness and engine harness connectors from the engine control module (ECM).

Note : Record all of the programmable parameters, features and calibration information from the old ECM for programming the new ECM.

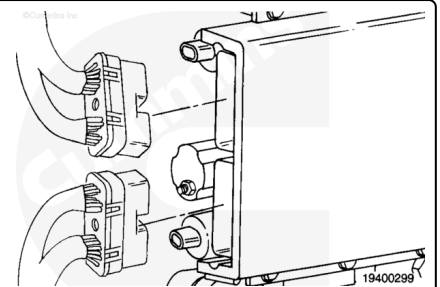

Remove the six capscrews which hold the ECM to it's securing platform.

Remove the ECM from it's platform.

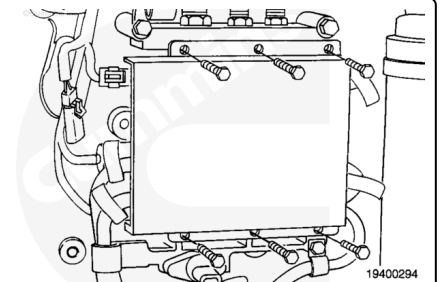


Install

⚠ CAUTION ⚠

Do not blow compressed air into the ECM ports or connectors. Compressed air can contain moisture due to condensation..

Use quick-dry electrical contact cleaner, Part Number 3824510, to remove all dirt and moisture from the ECM connector ports and the harness connectors.

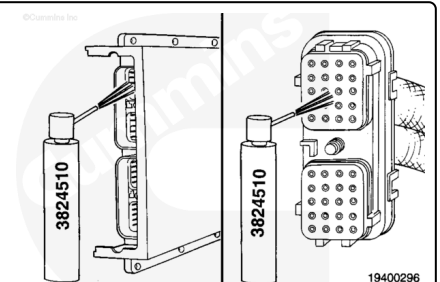


⚠ CAUTION ⚠

Make sure there is no grease or dirt between the ECM and it's securing platform..


Install the new ECM to its securing platform. Tighten the six capscrews.

Torque Value: 8 n·m [72 in-lb]

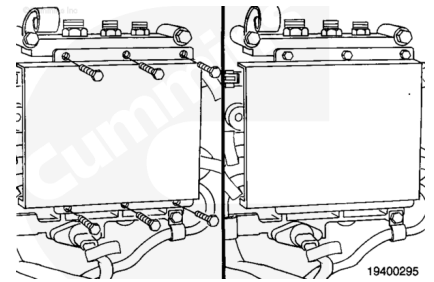

⚠ CAUTION ⚠


Use only Cummins recommended lubricate DS-ES, Part No. 3822934. Other lubricating oil or grease in the connectors can cause ECM damage, poor engine performance, or premature connector pin wear.

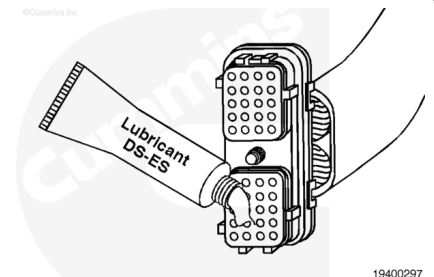

Apply a thin coating of lubricant to the connector nose piece.

Spread the lubricant across the connector nose piece so it enters every pin hole and lubricates the contacts.

Lubricant **must not** be visible on the surface of the nose piece.

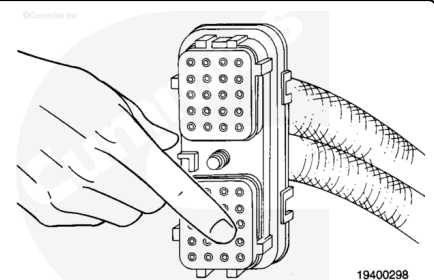

Connect the OEM and engine harness connectors to the ECM. Tighten the connector capscrews.

Use an inch-pound torque wrench, Part Number 3376592, with 4 mm [5/32 in] hex head adapter to tighten the connector jackscrew.

Torque Value: 2.8 n·m [25 in-lb]

Note : Do not over-torque as connector damage can occur.

Note : When an ECM is replaced, the new ECM must be calibrated. Use INSITE™ electronic service tool, Part Number 3825145, to calibrate the ECM.

