


Trainings ▾

Remove

Disconnect the engine speed sensor (ESS) connector from the engine harness.

Loosen the locknut.

Turn the ESS out of the flywheel housing.

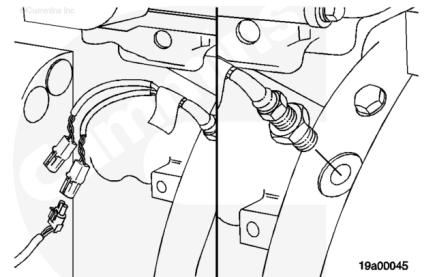


Install


Make sure a gear tooth is aligned with the hole in the flywheel housing.

Install the ESS into the hole until it touches the gear tooth.

Note : If the ESS does **not** turn in with finger pressure, check the flywheel housing hole threads and sensor threads for damage.

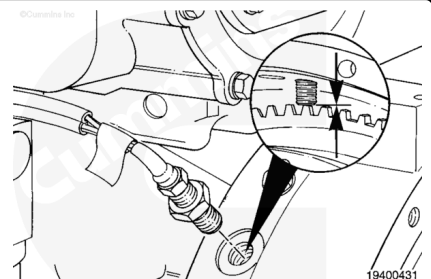

Turn the ESS out $\frac{1}{2}$ to $\frac{3}{4}$ turn **counterclockwise** .

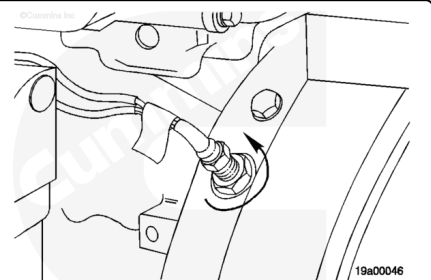


Tighten the locknut against the flywheel housing.

Torque Value: 34 to 47 n•m [25 to 35 ft-lb]

Note : Over-tightening the locknut can damage the sensor.

Install the connector. Make sure it locks into place.

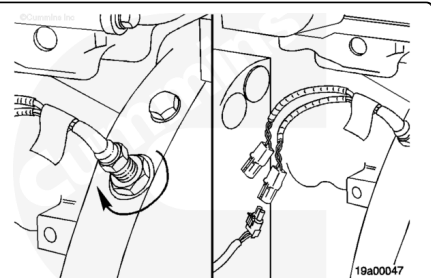

Resistance Check

Remove the engine harness connector from the ESS.

Place the Stop/Run switch in the STOP position.


Controller **not** in diagnostic mode.

Measure the resistance from pin A to pin B of the first ESS coil. The multimeter **must** show a resistance of less than 1500 ohms.

If the resistance is **not** less than 1500 ohms, replace the ESS.

Refer to Procedure 019-042

(/qs3/pubsys2/xml/en/procedures/94/94-019-042.html).

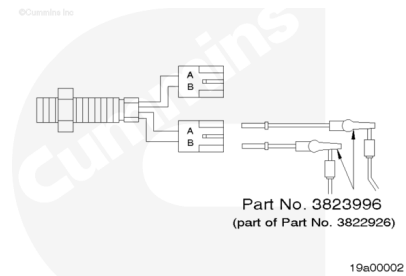


Measure the resistance from pin A to pin B of the second ESS coil. The multimeter **must** show a resistance of less than 1500 ohms.

If the resistance is **not** less than 1500 ohms, replace the ESS.

Refer to Procedure 019-042

(/qs3/pubsys2/xml/en/procedures/94/94-019-042.html).

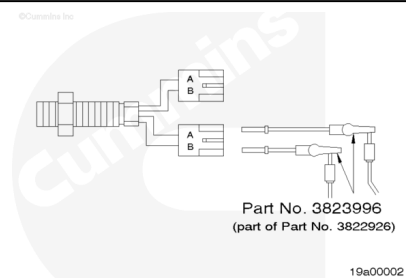


Check for Short Circuit to Ground

Use test lead, Part No. 3823996, for the Weather-Pack connector.


Measure the resistance from pin A of the ESS connector to the engine block. The multimeter **must** show an open circuit (100k ohms or more).

If the circuit is **not** open, replace the ESS. Refer to Procedure 019-042 (/qs3/pubsys2/xml/en/procedures/94/94-019-042.html).

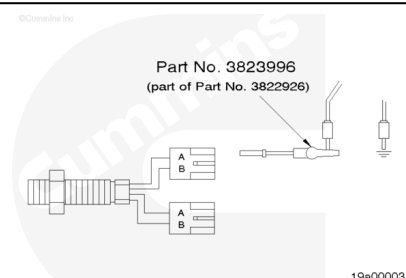

Measure the resistance from pin B of the ESS connector to the engine block. The multimeter **must** show an open circuit (100k ohms or more).

If the circuit is **not** open, replace the ESS. Refer to Procedure 019-042 (/qs3/pubsys2/xml/en/procedures/94/94-019-042.html).

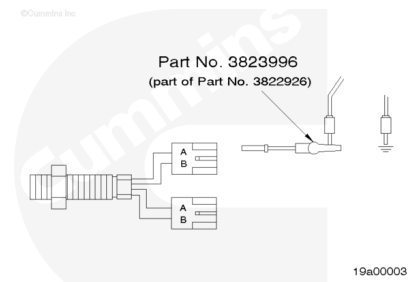

Last Modified: 24-Mar-2003
