


Trainings ▾

General Information


The QST30 G-Drive engine uses two separate wiring harnesses to control the engine and some of the equipment operations

1. Engine harness.
2. Original equipment manufacturer (OEM) harness.

The QST30 G-Drive also uses extension cables and an adaptor cable to attach the engine harness to the engine control module (ECM).

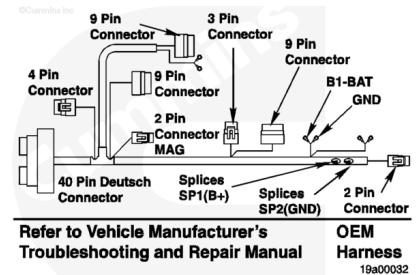


Replace a harness, or extension/adaptor cable, if there is an open circuit or a short circuit is found under the protective covering of the harness body.

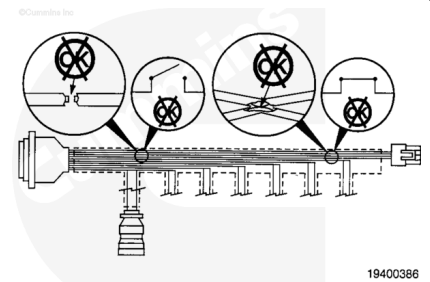


Remove


Remove the engine harness clamps.

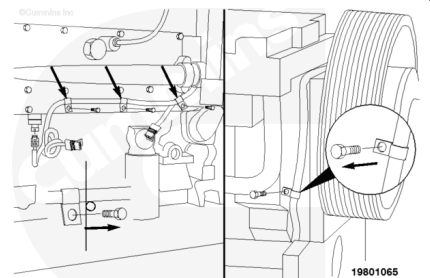


Disconnect the coolant temperature sensor.

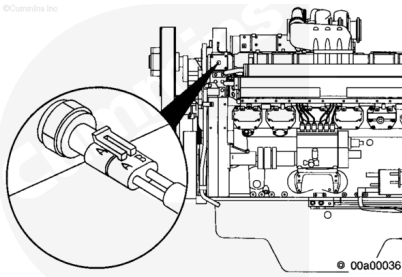


Disconnect the engine harness from the oil pressure sensor.

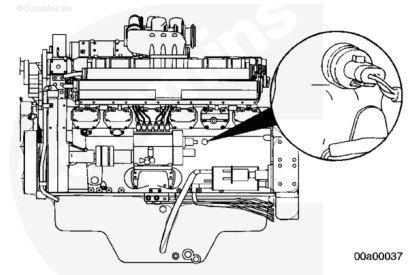


Disconnect the fuel shut off control wires to the fuel shut off solenoids (left bank and right bank).

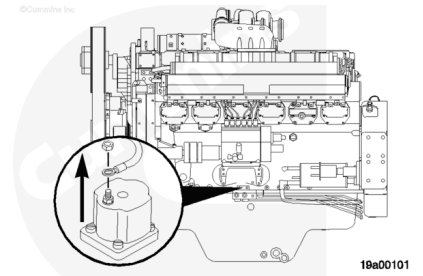

Disconnect the engine block ground from the block.

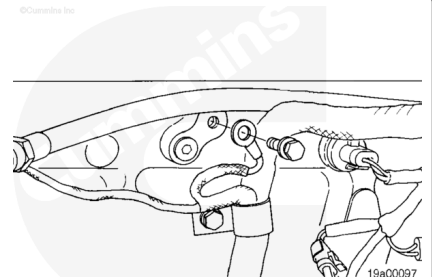


Use a 4 mm [5/32 inch] hex head wrench to disconnect the engine harness Deutsch™ connector from any engine harness extension used or the engine harness adaptor cable.

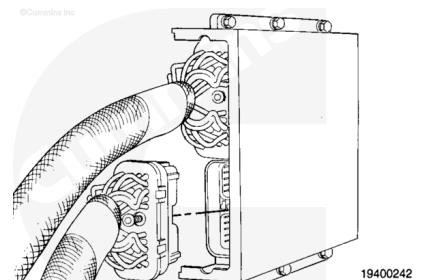


Cut the remaining ties holding the engine harness to the engine.

Remove the engine harness.

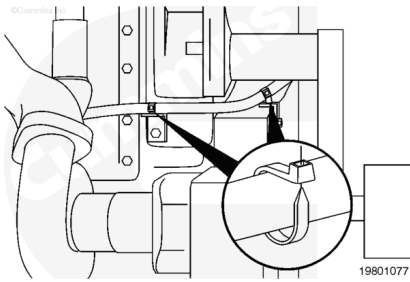


Engine Harness Extension Cable

Use a 4 mm [5/32 inch] hex head wrench to disconnect the attached cable's Deutsch™ connectors.

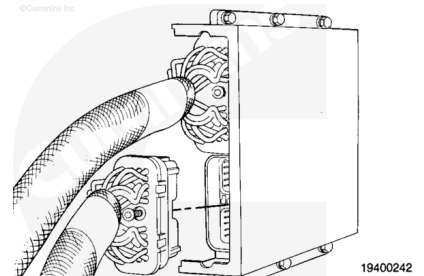


Engine Harness Adaptor Cable

Use a 4 mm [5/32 inch] hex head wrench to disconnect the attached cables Deutsch™ connectors from the ECM.

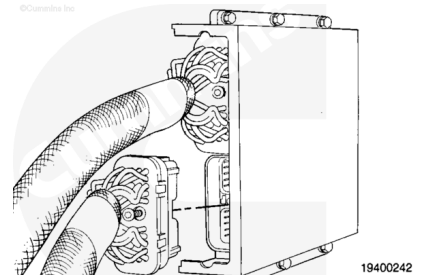


Install

Connect the engine harness to the engine using cable ties.

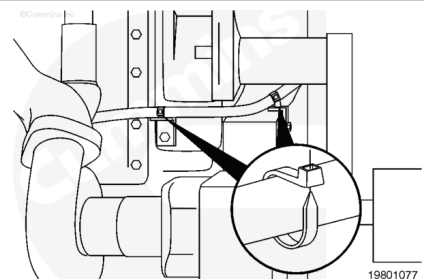

Connect the engine harness Deutsch™ connector to the engine harness extension cable, if used, or the engine harness adaptor cable.


Use an inch-pound torque wrench, Part Number 3376592, with 4 mm [5/32 in] hex head adapter to tighten the connector jackscrew.

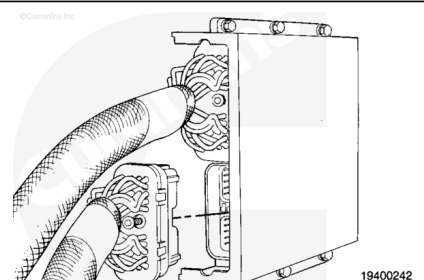

Torque Value: 2.8 n•m [25 in-lb]


Note : Do not over-torque as connector damage can occur.

Connect the engine harness to the oil pressure sensor.

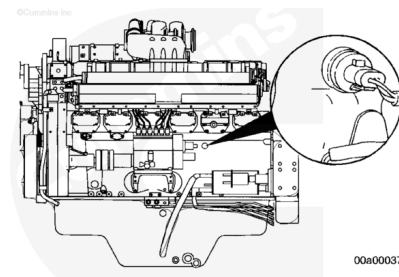


Connect the engine block ground to the engine block.

Torque Value: 20 n•m [15 ft-lb]

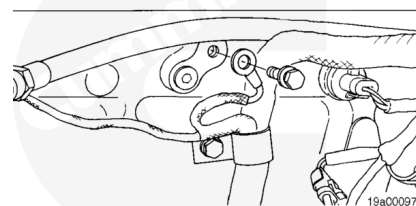


Connect the coolant temperature sensor.

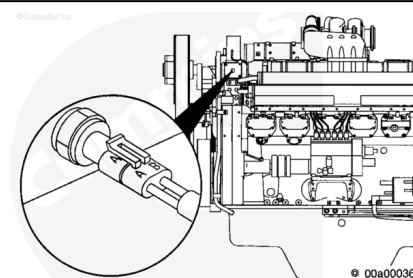

Engine Harness Extension Cable


Connect the connectors of the extension cable to the wiring harness. Use a 4 mm [5/32 inch] hex head wrench to tighten.

Torque Value: 3 n•m [25 in-lb]

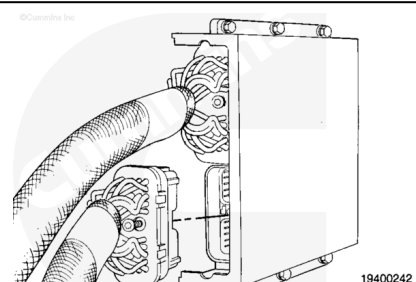

Engine Harness Adaptor Cable

Connect the engine harness, any engine harness extension cable used, and the ECM Deutsch connectors to the engine harness adaptor cable.

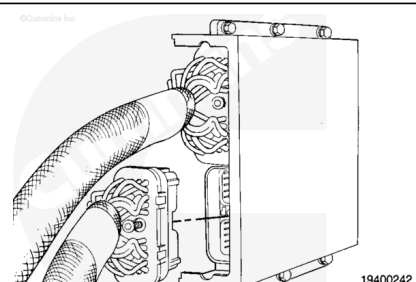

Use an inch-pound torque wrench, Part Number 3376592, with 4 mm [5/32 in] hex head adapter to tighten the connector jackscrew.

Torque Value: 2.8 n·m [25 in-lb]

Note : Do not over-torque as connector damage can occur.

Last Modified: 17-Apr-2014
