


Trainings ▾

Remove

Lift up on the tab and disconnect the connector from the sensor.

Remove the sensor from the engine block. Use a deep flank drive socket, Part No. 3823843.

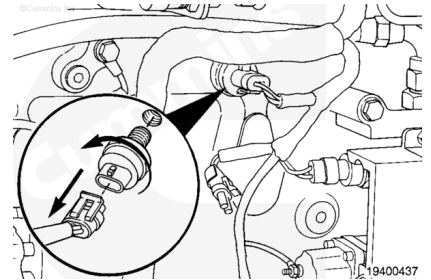

Install

Make sure the new sensor has an o-ring around the surface where it seals against the engine block.

Install the sensor in the engine block.

Torque Value: 14 n•m [10 ft-lb]

Push the connectors together until they lock.

