


Trainings ▾

General Information

The Idle/Rated switch is used to switch between Idle speed and Rated speed.

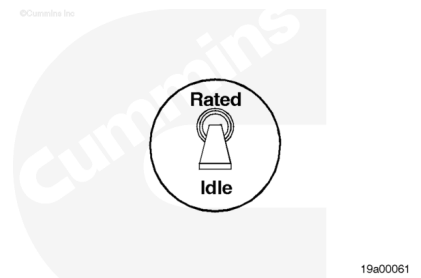


Resistance Check


Using INSITE™, Part No. 3825145, in the monitor mode, toggle the Idle/Rated switch between IDLE and RATED checking for proper operation.

If the switch does **not** operate properly or INSITE™ is **not** available, follow the troubleshooting procedures in this section.

Remove and tag the connectors from the terminals on the switch. Place the multimeter leads on each terminal.

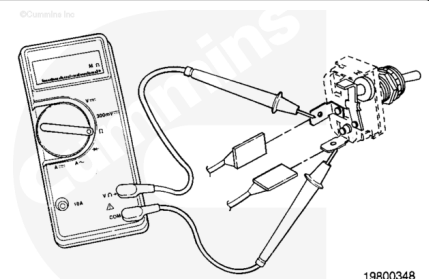


Place the Idle/Rated switch in the RATED position and measure the resistance. The multimeter **must** show an open circuit (100k ohms or more). If the circuit is **not** open, the switch has failed and **must** be replaced. Refer to OEM Troubleshooting and Repair Procedures.

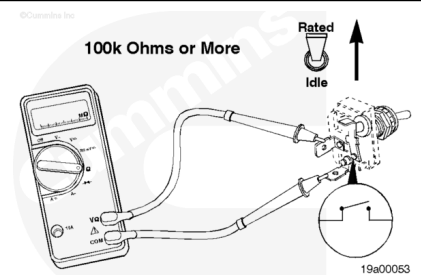

Move the switch to the IDLE position and measure the resistance. The multimeter **must** show a closed circuit (10 ohms or less). If the circuit is **not** closed, the switch has failed

and **must** be replaced. Refer to OEM Troubleshooting and Repair Procedures.

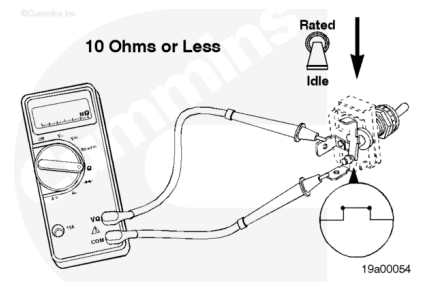

Last Modified: 24-Mar-2003
