


Trainings ▾

ECM Dataplate

The external ECM dataplate is located on top of the ECM.

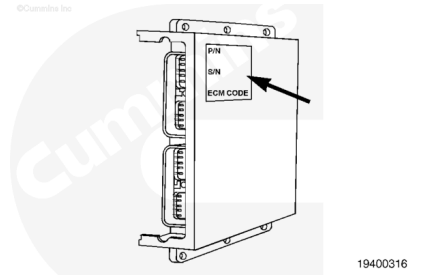

The dataplate contains the ECM part number (P/N), the ECM serial number (S/N), the manufacturing date code (D/C), the engine serial number (ESN), and the ECM code.

